



1/68

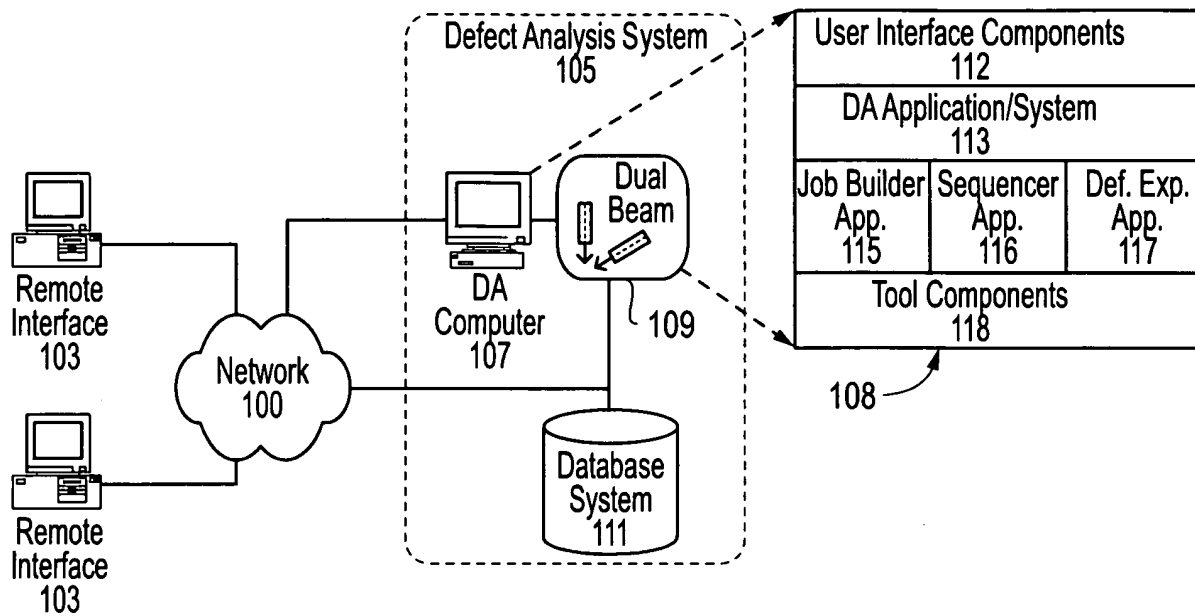


FIG. 1A

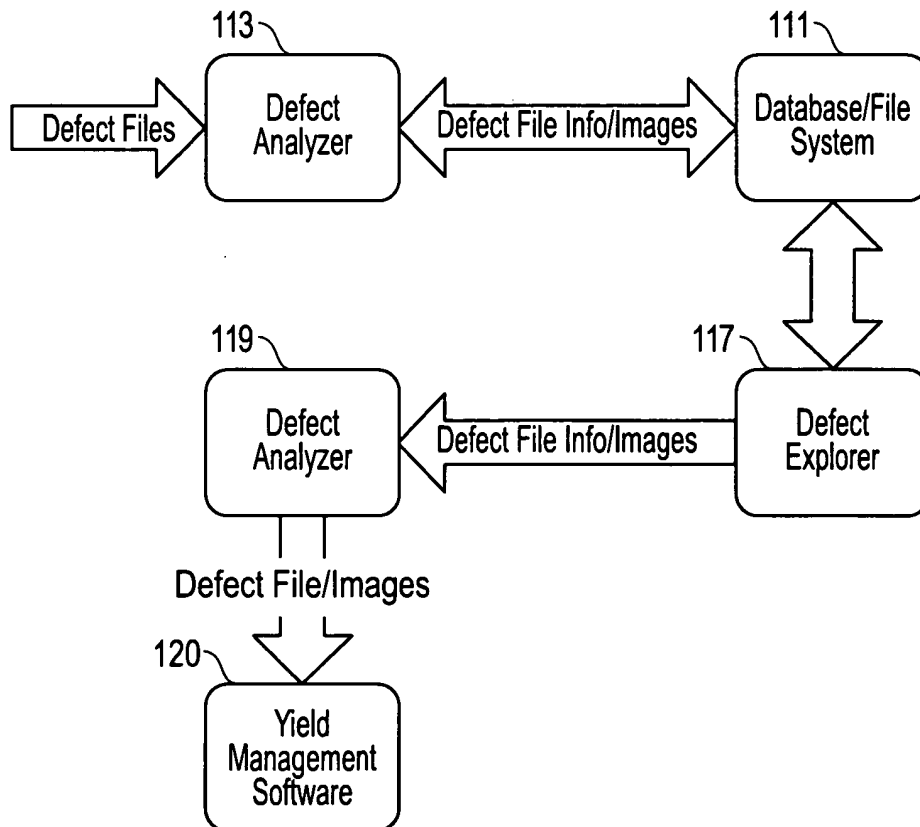


FIG. 1B

Tool Quadrant
225

FEI xP—SUPER (Supervisor)

File Scan Detector DB Control E-Mag I-Mag E-Beam I-Beam Patterning Stage Tools Window Help

Recipe Builder:

Name: Test

Sequences: ☒ Setup ☐ Process

This tool mills fiducials.

☐ Test-Setup
☒ Fei Fiducial Tool

Fiducial Tool Configuration

	Low	Med	High	Bitmap:
Fast	0.028	0.091	0.362	...
-	0.024	0.181	0.724	
-	0.136	0.543	2.173	
Slow	0.396	1.584	6.337	

Size (%FOV)

Defect:

Fiducial:

40.000000

10.000000

Fiducial Offset From Center (%FOV)

X:

Y:

30.000000

0.000000

Integrate

1

GIS:

None

Depth:

1.000000

Configure EBeam Realign

Configure EBeam BMP Realign

Configure IBeam Realign

Configure IBeam BMP Realign

Defect Analyzer Site Status

Site#	Defect#	Classification	Status

Beam

Mag

Det

FWD

Tilt

Scan

Navigation Quadrant 235

Defect Analyzer Space 245

Tilt: ☒ Zero ☐ Fifty-Two

Recipe Memo:

Test the Recipe:

Run

Refresh

Data Directory:

C:\

Image
Quadrant
205

Site Status
Quadrant
215

FIG. 2

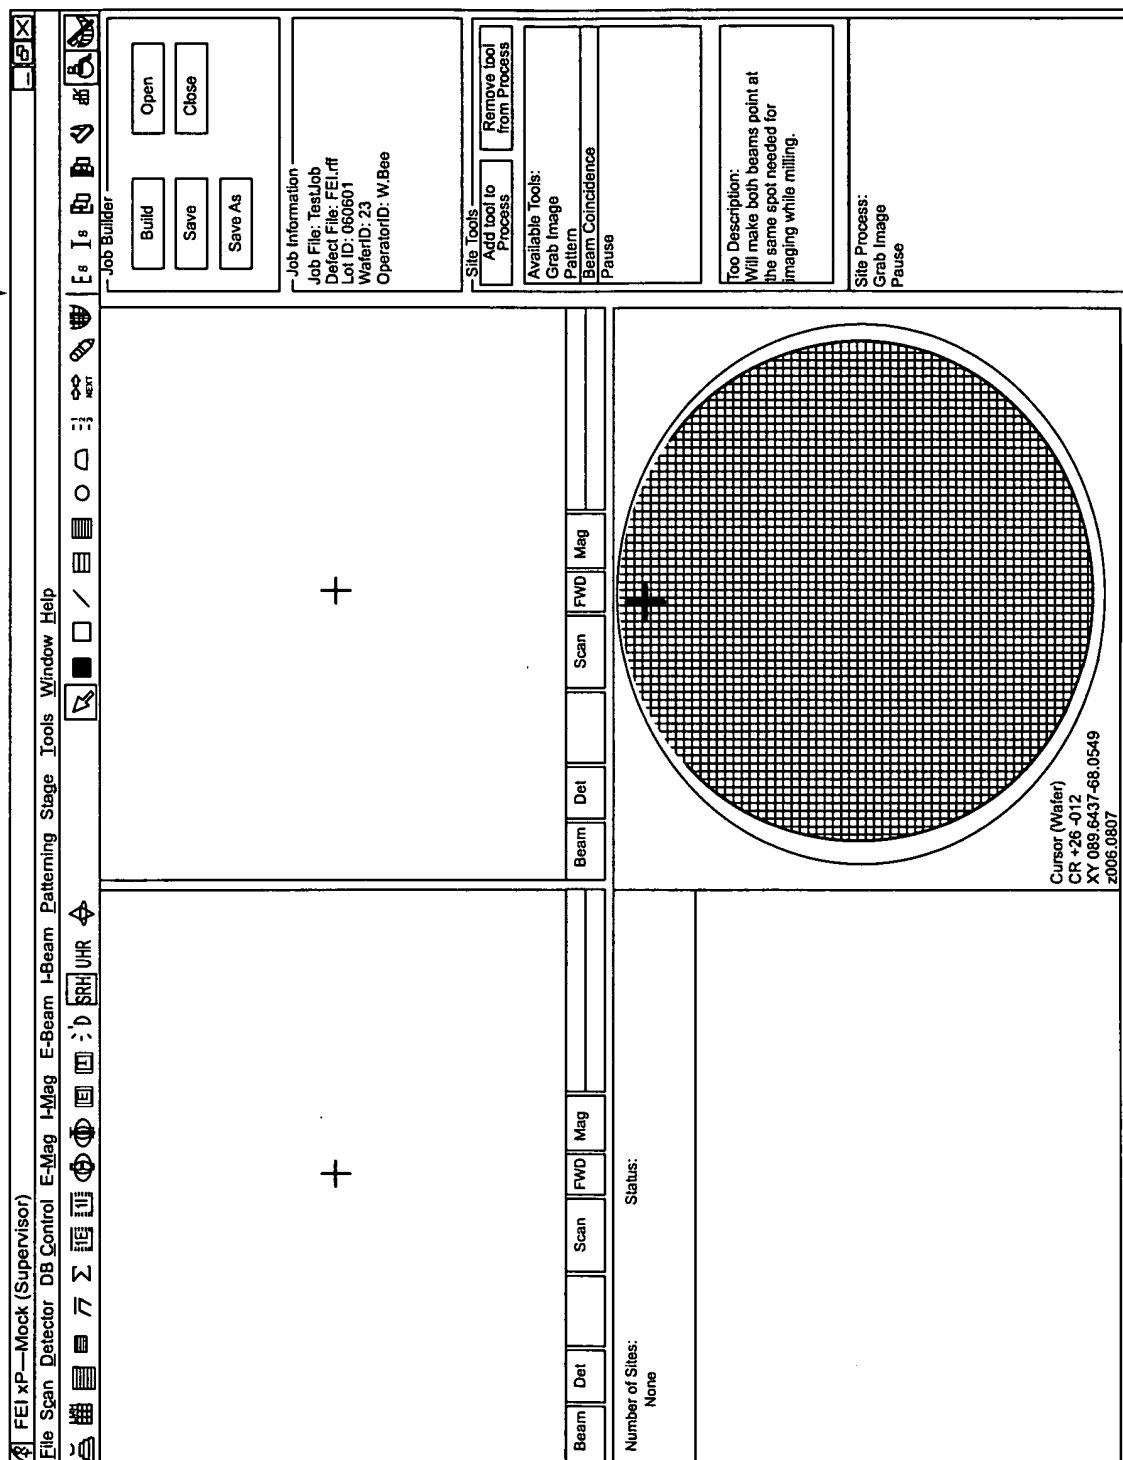


FIG. 3A

Item	Description
Job Builder:	
Build	Initiates building of new job
Save	Save the job information.
Save As	Functions conventionally
Open	Functions conventionally
Close	Functions conventionally
Job Information	Functions conventionally
Site Tools:	
Add Tool to Process	Inserts selected tool into process
Remove Tool from Process	removes selected tool from process
Available Tools	Displays tools available for processes
Tool Description	Brief description of tool
Site Process	Displays process (recipe) as it is being constructed by user

FIG. 3B

Available Tools: Grab Image Pattern Beam Coincidence Pause
Tool Description: Will make both beams point at the same spot needed for imaging while milling
Site Process: Grab Image Pause

FIG. 3C

Job Wafer Data Input		
Job Wafer Data Input		
Operator ID:	W. Bee	...
Defect File:	fei.rff	...
Lot ID:	060265	...
Wafer ID:	01	...
Job File:	TestJob.dar	...
Product:	Train Align	...
<input type="checkbox"/> Unload Wafer when Job Complete		
Run		Cancel

FIG. 3D

Review Session

Align To...	End Review
Filter...	Realign...
Move To...	

FIG. 3E

Edit Active Site Filter

Filter Name

Filter Criteria

Classification	<input checked="" type="checkbox"/>	1,2,3-4,7
Size x (μm)	<input checked="" type="checkbox"/>	2-12
Size y (μm)	<input checked="" type="checkbox"/>	1,2
Die Column:	<input type="checkbox"/>	
Die Row	<input type="checkbox"/>	
SLI	<input type="checkbox"/>	
Visited	<input checked="" type="checkbox"/>	Yes <input type="radio"/> No <input type="radio"/>
Modified	<input checked="" type="checkbox"/>	Yes <input type="radio"/> No <input type="radio"/>
Has Image	<input type="checkbox"/>	Yes <input type="radio"/> No <input type="radio"/>
ADE Channel	<input type="checkbox"/>	Light <input type="radio"/> Dark <input type="radio"/>
SP1 Channel	<input checked="" type="checkbox"/>	Composite
Modified	<input checked="" type="checkbox"/>	Bright Field
Modified	<input checked="" type="checkbox"/>	Dark Wide
Modified	<input checked="" type="checkbox"/>	Dark Narrow

New Open...

Save Save As...

Random Subset

☐ Enable Random Subset

50 Percent

Test Results

Apply Now

Total Sites	595
Filtered Out	0
Remaining	595

☐ Temporary Disable Filter

Class List... Undo Undo All Close

FIG. 3F

Interface Items	Description
Filter Name	Identifies the filter.
Filter Criteria	These check boxes and list boxes select the filter criteria
New	Creates a new filter file.
Open	Opens an existing filter.
Save	Saves the edited filter definition. It is available only if allowed by configuration.
Save As	Saves the edited filter definition to a new file name. It is available only if allowed by configuration.
Random Subset	Specifies the maximum number of random sites passing the filter.
Test Results	Tests and reports the effect of site filter changes.
Temporarily Disable Filter	Temporarily disables the active site filter.
Graph	Displays a histogram of the defect sites.
Class List	Opens the Edit Class List dialog box.
Undo	Undoes the last change. You cannot undo changes already saved to file.
Undo All+	Undoes all changes made since dialog box opened. You cannot undo changes already saved to file.
Close	Closes the dialog box. Applies the defined filter to the current review session but does not save the filter to file.

FIG. 3G

Criterion	Value Type	Description
Classification	Integer	Classification code assigned to the site
Size X (μm)	Real	X dimension of the site in microns
Size Y (μm)	Real	Y dimension of the site in microns
Die Column+n	Integer	Die column of the die containing the site
Die Row	Integer	Die row of the die containing the site
SLI	Integer	Scattered light intensity reported for the site
Visited	Yes/No	Site has or has not been visited during the review session
Modified	Yes/No	Site has or has not been classified or relocated during the review session
ADE Channel	Light/Dark	Site has or has not been visited during the review session
SP1 Channel	n/a	Site has selected attributes. This filter is active if the defect format is T7x00 and the defect file has more than one channel.
Has Image	Yes/No	Site has or does not have image data associated with it

FIG. 3H

Relational Operators	Meaning
=	Equal to
!=	Not equal to
<	Less than
<=	Less than or equal to
>	Greater than
>=	Greater than or equal to

FIG. 3I

9/68

Random Subset

☒ Enable Random Subset

50 Percent ▼

Percent

Maximum

FIG. 3J

Test Results

Apply Now

Total Sites 68
Filtered Out 0
Remaining 68

FIG. 3K

Defect File fei2.001
Wafer ID @05
Lot ID K54148350
Process ID 814FC
68 Total Sites, 68 Passing Filter

FIG. 3L

☒ Temporarily Disable Filter

FIG. 3M

Defect #	Size X	Size Y	Classification Recipe Name	Die Row

FIG. 3N

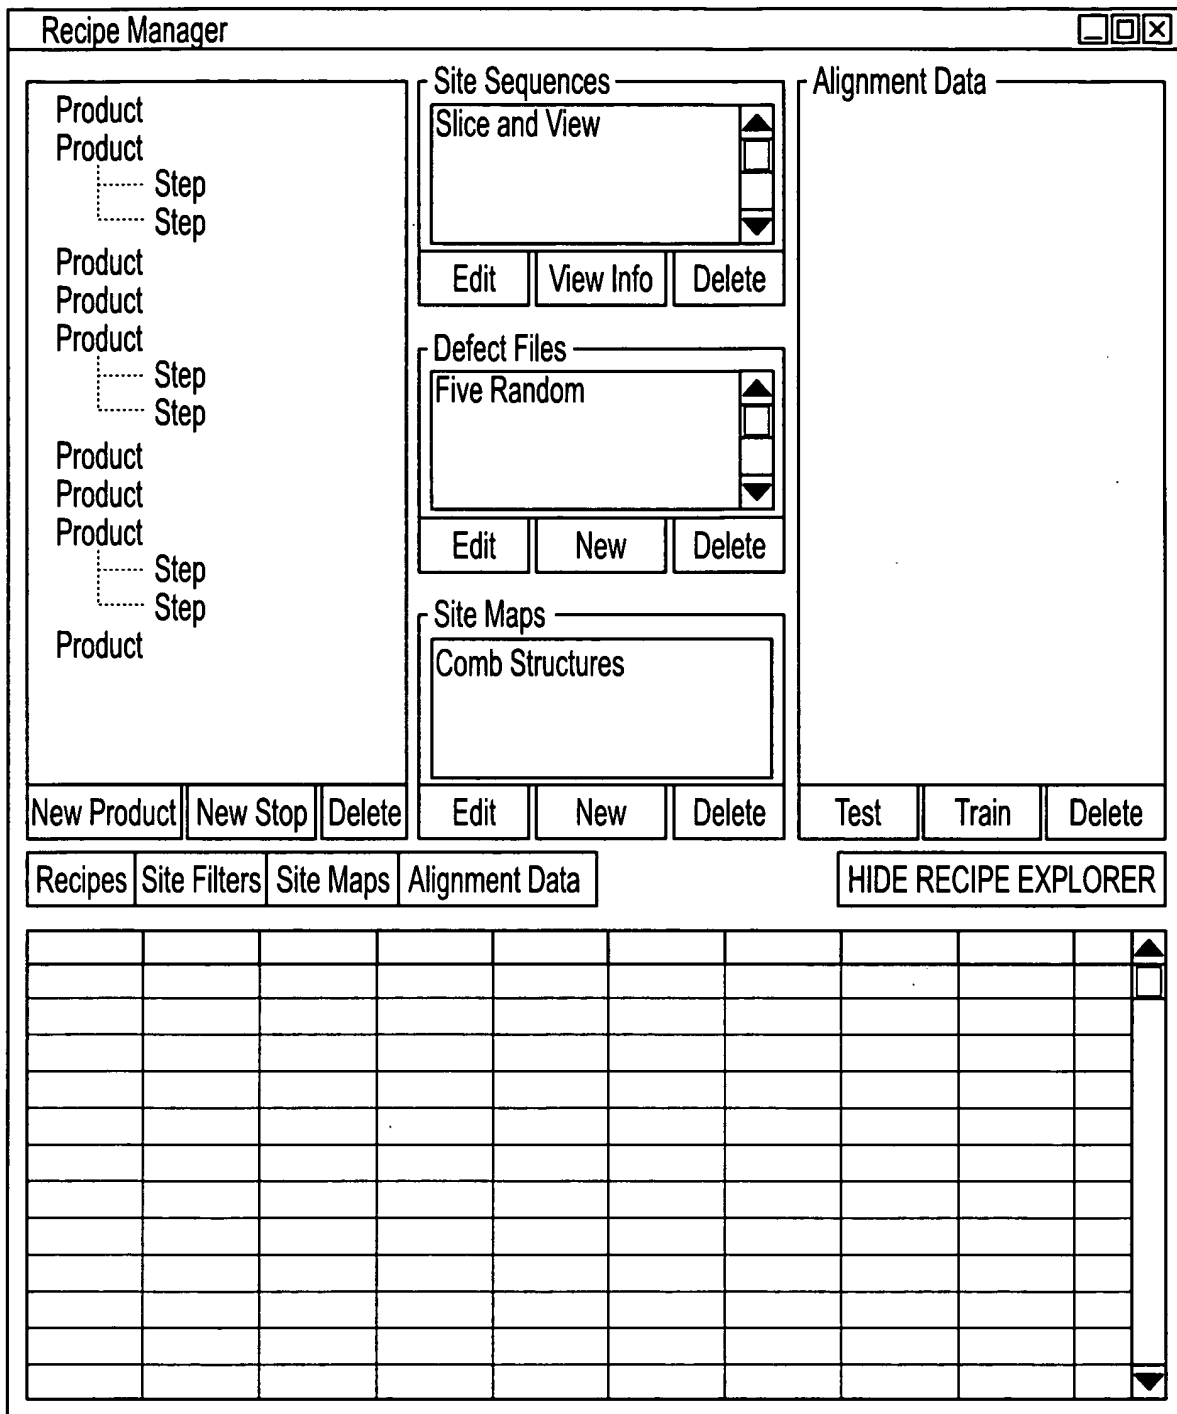


FIG. 30

Product	
Product	
<div> <div></div> <div></div> </div>	Step
	Step
Product	
Product	
Product	
<div> <div></div> <div></div> </div>	Step
	Step
Product	
Product	
Product	
<div> <div></div> <div></div> </div>	Step
	Step
Product	

New Product	New Stop	Delete
-------------	----------	--------

FIG. 3P

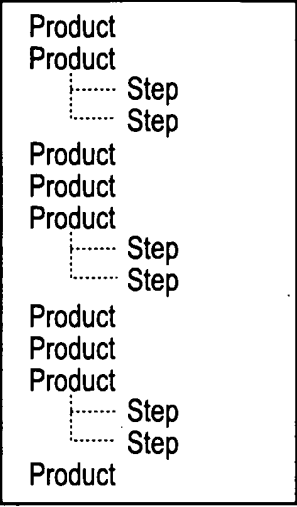



Control	Descriptions	Behavior
	<p>Product/Step Tree: This is the interface through which specific Steps are created, edited, and deleted.</p>	<p>Sorting: Alphabetized by Product, then by Step.</p> <p>Node Behavior: Expandable and Collapsible through a standard interface. Persist Expansions for the life of the dialogue.</p> <p>Scroll Bars: Scrolling should be allowed.</p>
	<p>New Product Button: This is used to add a New Product to the Database.</p>	<p>Click: This should launch a "New Product Wizard" which is described below.</p>
	<p>New Step Button: This is used to add a New Step to whichever product is selected in the Product/Step Tree View (above).</p>	<p>Enable/Disable: Enable if a Product has been selected. Disabled otherwise.</p> <p>Click: This should launch the "New Step Wizard" which is described below.</p>
	<p>Delete Button: This is used to remove products or steps from the database</p>	<p>Click: This should launch a standard two-button dialogue with the message, "Permanently Delete [Product/Step] Information?". Then buttons are "Cancel" and "OK".</p>

FIG. 3Q

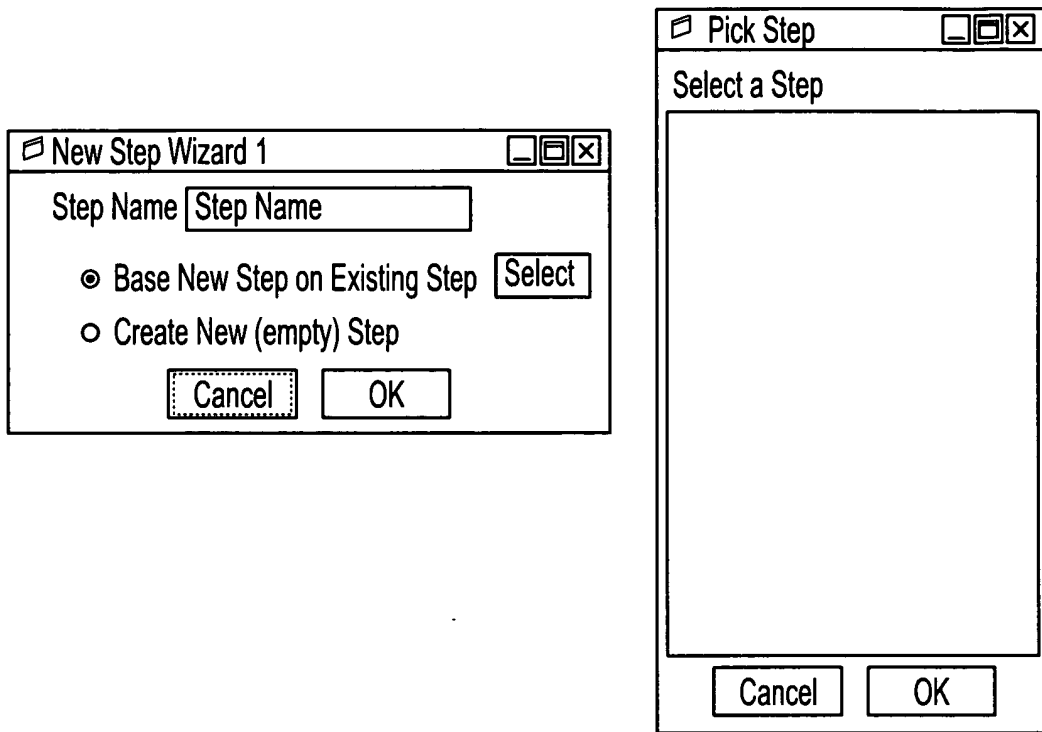


FIG. 3R

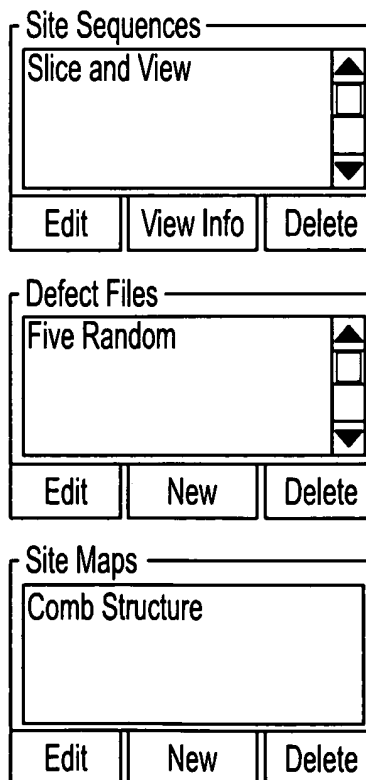


FIG. 3S

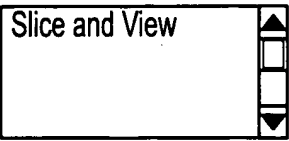





Control	Descriptions	Behavior
	<p>Site Sequence List Tree View: This displays a list of Site Sequences which can be expanded to show the names of the tools.</p>	<p>Scrolling: Should be scrollable.</p> <p>Node Behavior: Expanded nodes should stay expanded.</p> <p>Alphabetized.</p> <p>Click: This should highlight the site sequence.</p> <p>Default selection: The first site sequence in the list should be highlighted by default.</p> <p>Double-Click: This should expand the node to display the list of tools within the site sequence.</p> <p>Mouse Over: This should display the Site Sequence Name followed by the text description of the site sequence (if any).</p>
	<p>Edit Button: This loads the site sequence into the Recipe Builder page.</p>	<p>(Optionally) the page display should be switched to the Recipe Builder</p> <p>Click: Load the selected site sequence into the recipe builder page</p>
	<p>View Info Button: THIS BUTTON HAS BEEN REMOVED.</p>	<p>NOT APPLICABLE. (the tree view functionality eliminates the previously envisioned function of this button).</p>
	<p>Delete Button: This button removes the site sequence from the database.</p>	<p>Click: This removes the site sequence from the database as far as the user is concerned. The actual implementation should include an "Is Deleted" flag to indicate that the site sequence should not be displayed. This will prevent previously configured process from being invalidated.</p>
	<p>Site Filter Text Box: This shows a list of all Site Filters available for the selected Product/Step in the Product/Step Tree View control (above).</p>	<p>Alphabetize.</p> <p>Click: Highlight the site filter.</p> <p>Default Selection: The first of the list should be highlighted by default..</p>
	<p>Edit Button: This is used to edit the highlighted site filter.</p>	<p>Click: Launch the site filter dialog for the highlighted site filter.</p>

FIG. 3T

Alignment Data

Test

Train

Delete

FIG. 3U

[illegible]

FIG. 3W

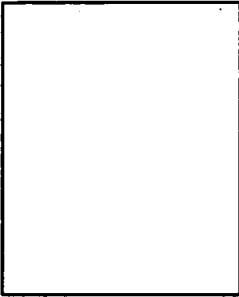



Control	Descriptions	Behavior
	Alignment Data Tree View. This is a tree view showing the Alignment data in the following order.	<p>Node coloring: The nodes should be colored red if they or a child is untrained.</p> <p>Data Structure: A preliminary data structure for this tree is shown and described in the following section.</p>
	Test Button. If appropriate, this should test the selected alignment on the wafer loaded into the system.	<p>Enable/Disable: This is dependent on the highlight node of the Alignment Data Tree View. For certain alignments test functionality will not be appropriate and should not, therefore, be applied.</p> <p>Click: Run the alignment for the highlighted node and all child nodes in the Alignment Data Tree View.</p>
	Train Button. If appropriate, this should initiate the portion of the Alignment Training Wizard for the selected node.	<p>Enable/Disable: For some nodes this control may not make sense or may require functionality not provided by the software. In these situations the control should be either disabled or handled through a clear, concise error message. For example, training the zero degree alignments for a wafer loaded at 52 degrees might prompt the user to tilt to zero degrees and try the alignment again.</p> <p>Click: Run the portion(s) of the alignment training wizard for the highlighted node and child nodes. Note that there may be unanticipated exceptions that need to be dealt with (such as no wafer is loaded) that will require increased robustness in handling of errors and exceptions. These will be ferreted out at a later time.</p>
	Delete Button: This permanently deletes alignment data from the database.	Click: This should launch a standard two button dialogue with the message "This will

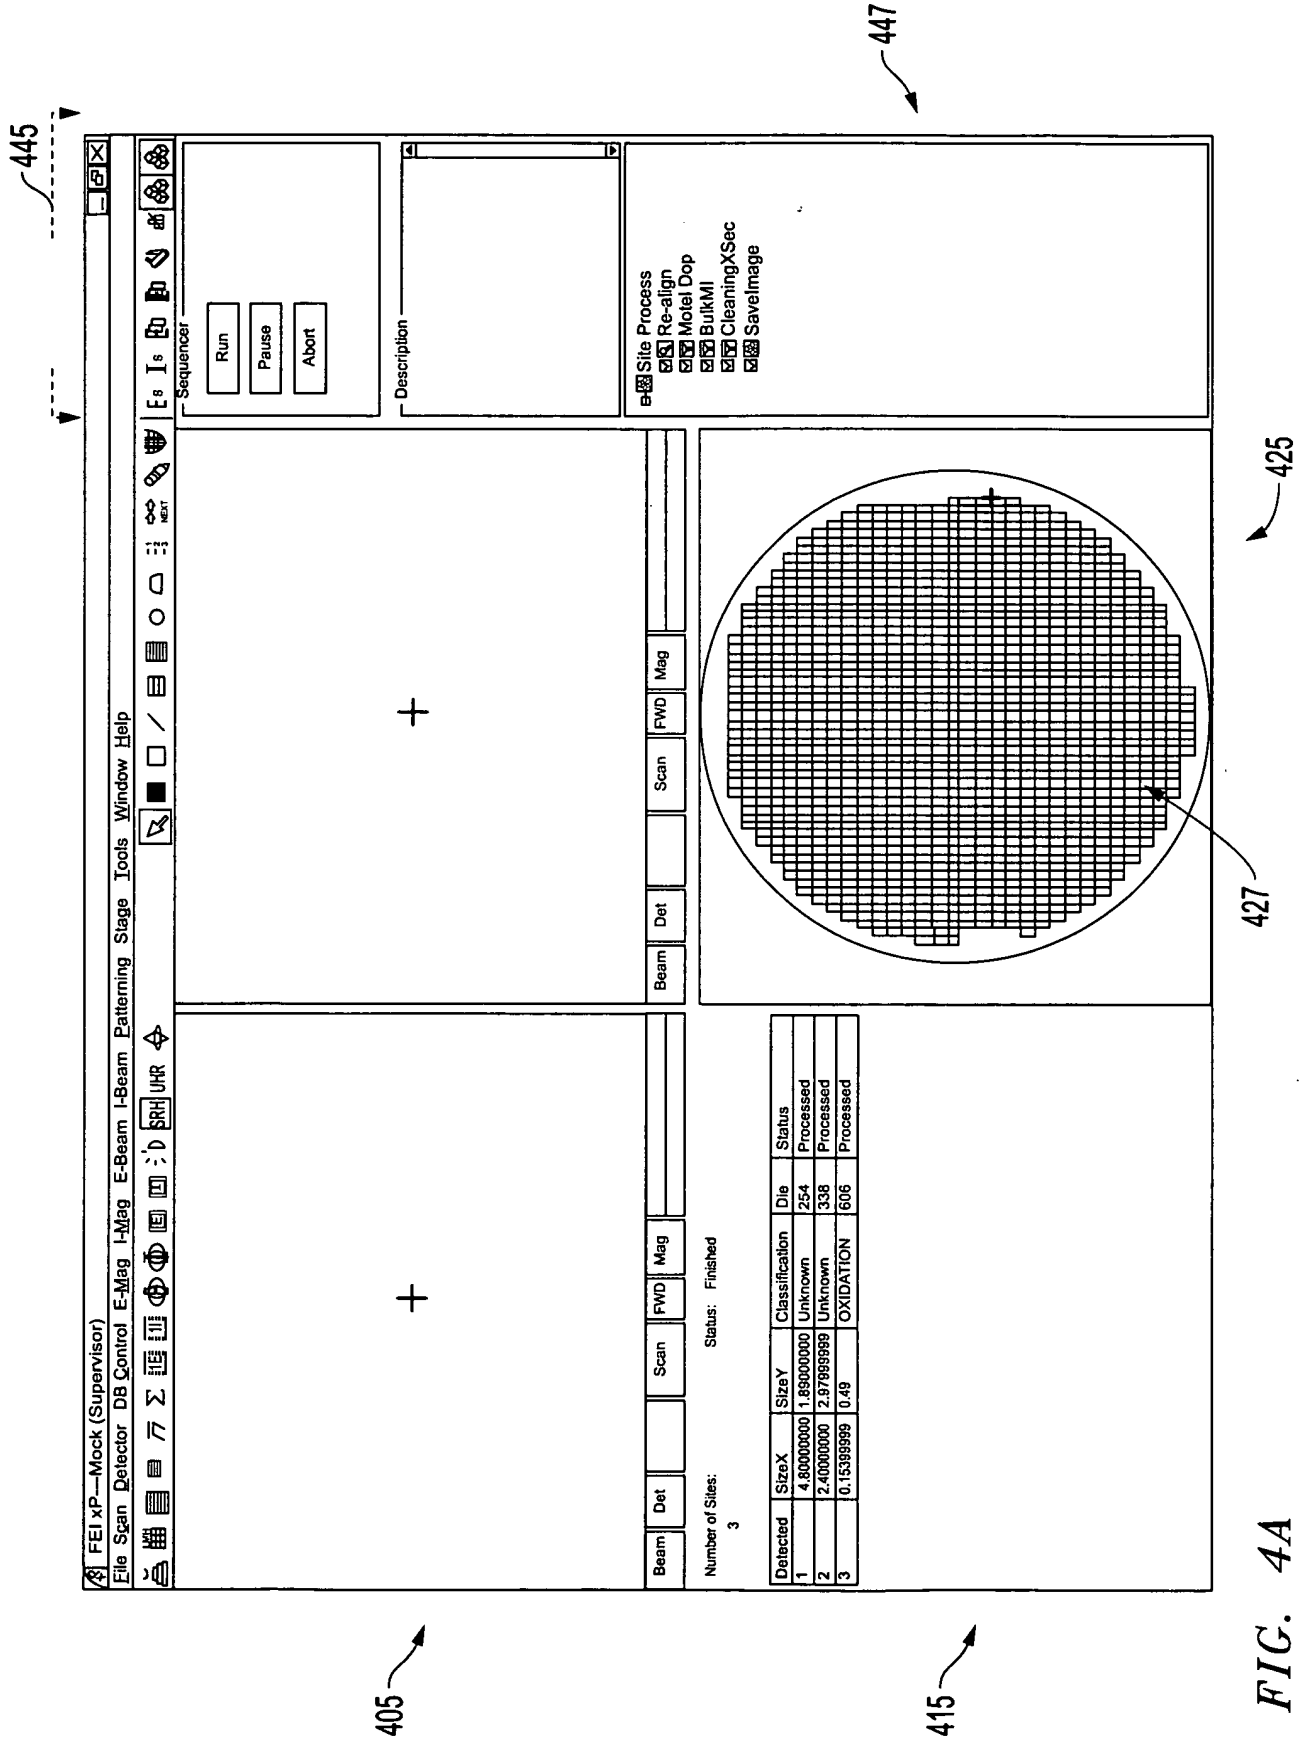
FIG. 3V

Control	Descriptions	Behavior
HIDE RECIPE EXPLORER		
Recipes	<p>Recipe Tab. This should have the following fields.</p> <ul style="list-style-type: none"> ○ Product ○ Step ○ Recipe Name ○ Creation Date 	
Site Filters	<p>Site Filter Tab. This should have the fields listed below. As an added feature, there could be a "view filter button" to allow a quick look at the data through a new window</p> <ul style="list-style-type: none"> ○ Product ○ Step ○ Recipe Name ○ Creation Date 	
Site Maps	<p>Site Map Tab. This should have the fields listed below. As an added feature, there could be a "view filter button" to allow a quick look at the data in a new window (similar to above).</p> <ul style="list-style-type: none"> ○ Product ○ Step ○ Recipe Name ○ Creation Date 	
Alignment Data	<p>Site Map Tab. This is a complex control, but the should have the fields listed below. Alignment Node should be path which indicates where the alignment data exists on a tree structure identical to that described above.</p> <ul style="list-style-type: none"> ○ Product 	

FIG. 3X

- ◇ Alignment Name #1
 - Wafer Alignment
 - Product Offset
 - Zero Degrees
 - Alignment Dies
 - Top-Down Electron Beam Image
 - Ion Beam Image
 - Fifty-Two Degrees
 - Alignment Dies
 - Ion Beam Image
 - Electron Beam Image
 - System Calibrations
 - Height Probe Offset
 - Zero Degrees
 - Fifty-Two Degrees
- ◇ Alignment Name #2

FIG. 3Y



Item	Description
Run	Loads the wafer and runs the selected job.
Pause	Pause job execution
Abort	Terminate job execution
Description	Comment text describing job if included in job
Site Process	Displays job process tools

FIG. 4B

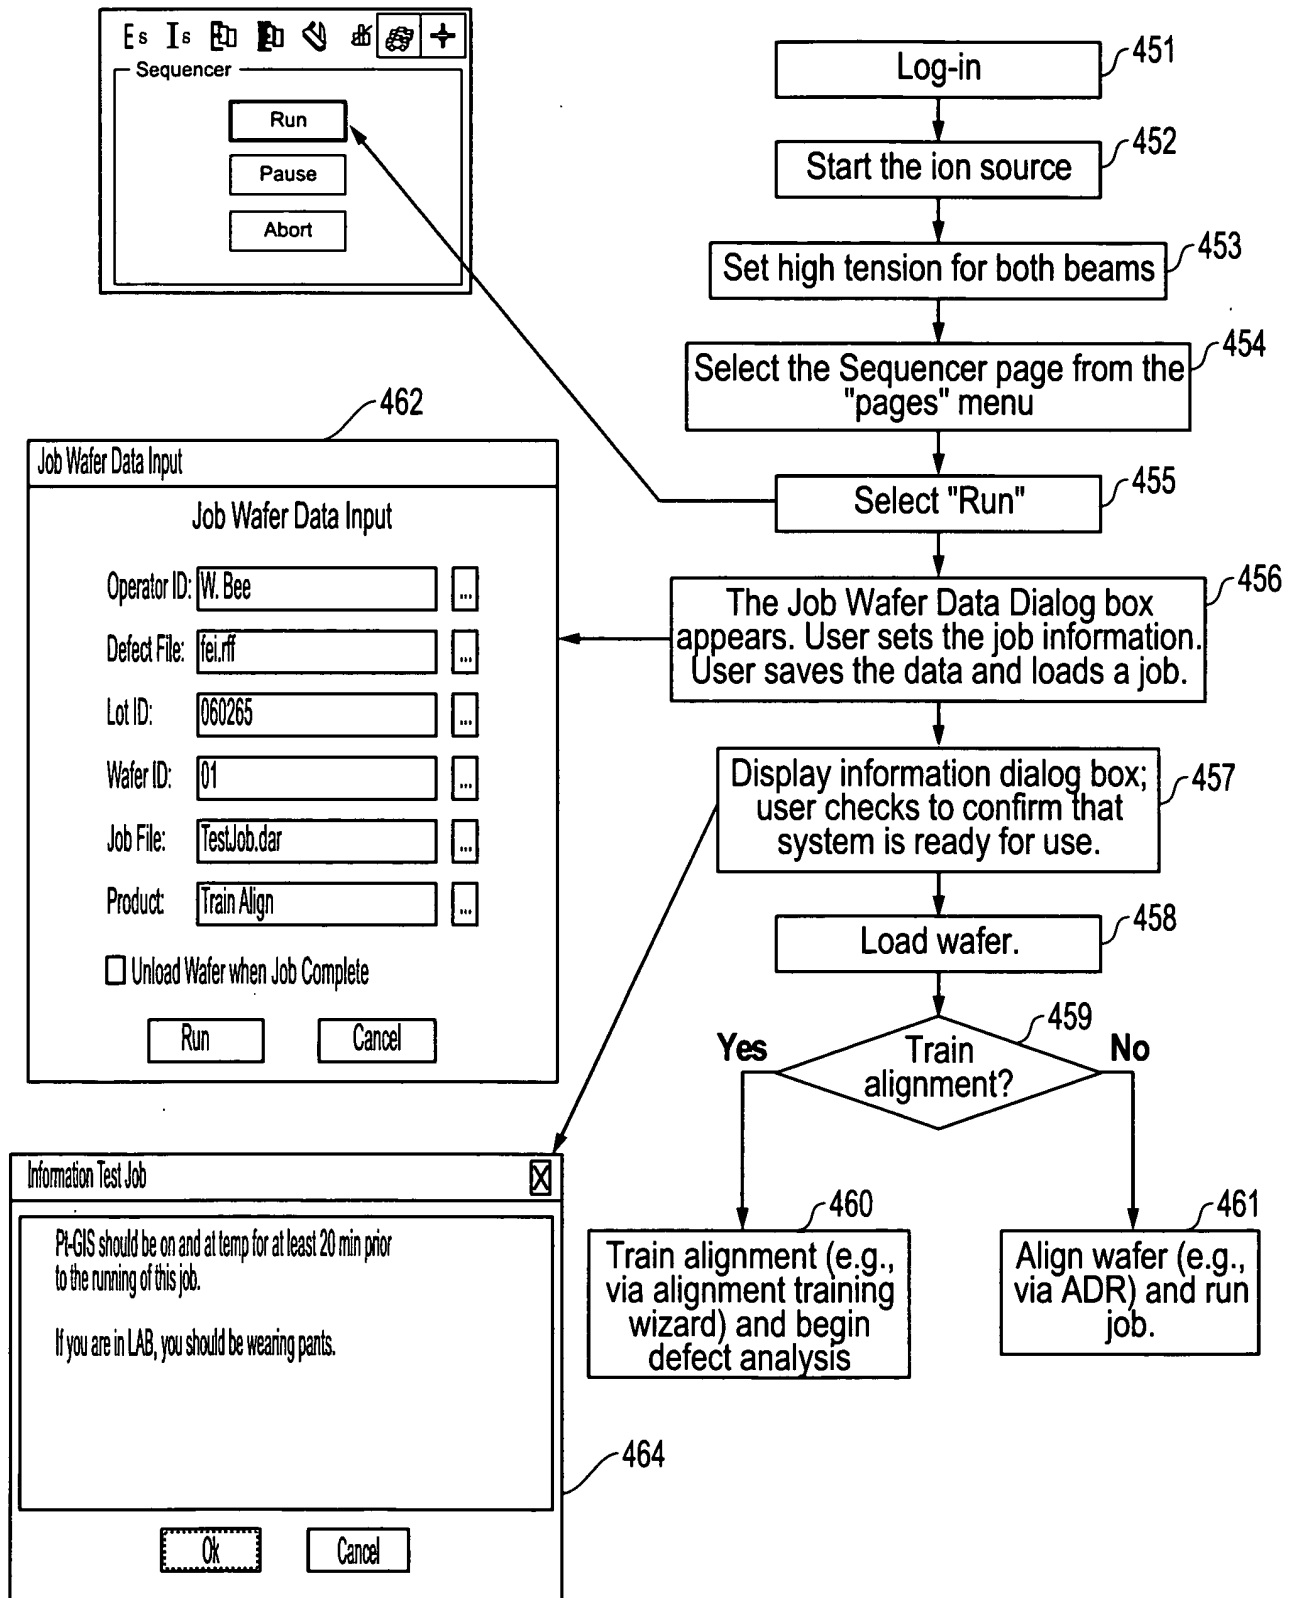


FIG. 4C

Job Wafer Data Input

Job Wafer Data Input

Operator ID: W. Bee ...

Defect File: fei.rff ...

Lot ID: 060265 ...

Wafer ID: 01 ...

Job File: TestJob.dar ...

Product: Train Align ...

☐ Unload Wafer when Job Complete

Run Cancel

FIG. 4D

Interface Items	Description
Operator ID	Required field where the user enters name.
Detect File	Defect file for the job. User opens an existing defect file. Clicking the select button opens the Select Defect dialog box.
Lot ID	Maximum of 15 characters. Value is read in from defect file or job file, selected from dialog box, or entered by the operator.
Wafer ID	Maximum of 5 characters. Value is read in from defect file or job file, selected from dialog box, or entered by the operator.
Job File	Selects a recipe or job file. The recipe contains no wafer information, the job file contains wafer information. They have different extensions, .daj and .dar.
Product	Identifies the alignment wizard for the wafer. If TRAIN ALIGN is selected, when the user clicks RUN, the Alignment Training wizard starts.
Cass A/B	Shows the slots that are occupied.
Inventory	Inventories the cassettes.
FlexiLock	Shows if wafer is in the cassette.
Unload wafer when job complete	Provides automated wafer unloading when a job is complete.
RUN	Dialog box closes and the Information dialog box displays. When user clicks OK in information dialog box the sequencer runs the job. This button is not active until information for at least one wafer is entered.
Cancel	Dialog box closes without saving the values. In job builder, the dialog box closes and the Add Tool interface displays. In sequencer, a warning box displays so that the user does not unintentional lose information. Then, the Sequencer page becomes active again.
Select button	Open dialog where predefined files, wafer, etc., can be selected.

FIG. 4E

Job Wafer Data Input			
Job Wafer Data Input			
Operator ID:	<input type="text" value="W. Bee"/>	<input data-bbox="630 556 672 598" type="button" value="..."/>	
Defect File:	<input type="text" value="fei.rff"/>	<input data-bbox="630 619 672 661" type="button" value="..."/>	
Lot ID:	<input type="text" value="060265"/>	<input data-bbox="630 682 672 724" type="button" value="..."/>	
Wafer ID:	<input type="text" value="01"/>	<input data-bbox="630 745 672 787" type="button" value="..."/>	
Job File:	<input type="text" value="TestJob.dar"/>	<input data-bbox="630 808 672 850" type="button" value="..."/>	
Product:	<input type="text" value="Train Align"/>	<input data-bbox="630 871 672 913" type="button" value="..."/>	
<input data-bbox="310 940 488 989" type="button" value="Run"/>		<input data-bbox="570 940 748 989" type="button" value="Cancel"/>	
		Class A	Class B
		<input data-bbox="829 546 922 577" type="checkbox"/>	<input data-bbox="1024 546 1117 577" type="checkbox"/>
		<input data-bbox="829 577 922 609" type="checkbox"/>	<input data-bbox="1024 577 1117 609" type="checkbox"/>
		<input data-bbox="829 609 922 640" type="checkbox"/>	<input data-bbox="1024 609 1117 640" type="checkbox"/>
		<input data-bbox="829 640 922 672" type="checkbox"/>	<input data-bbox="1024 640 1117 672" type="checkbox"/>
		<input data-bbox="829 672 922 703" type="checkbox"/>	<input data-bbox="1024 672 1117 703" type="checkbox"/>
		<input data-bbox="829 703 922 735" type="checkbox"/>	<input data-bbox="1024 703 1117 735" type="checkbox"/>
		<input data-bbox="829 735 922 766" type="checkbox"/>	<input data-bbox="1024 735 1117 766" type="checkbox"/>
		<input data-bbox="829 766 922 798" type="checkbox"/>	<input data-bbox="1024 766 1117 798" type="checkbox"/>
		<input data-bbox="829 798 922 829" type="checkbox"/>	<input data-bbox="1024 798 1117 829" type="checkbox"/>
		<input data-bbox="829 829 922 861" type="checkbox"/>	<input data-bbox="1024 829 1117 861" type="checkbox"/>
		<input data-bbox="829 861 922 892" type="checkbox"/>	<input data-bbox="1024 861 1117 892" type="checkbox"/>
		<input data-bbox="829 892 922 924" type="checkbox"/>	<input data-bbox="1024 892 1117 924" type="checkbox"/>
		<input data-bbox="829 924 922 955" type="checkbox"/>	<input data-bbox="1024 924 1117 955" type="checkbox"/>
		<input data-bbox="829 955 922 987" type="checkbox"/>	<input data-bbox="1024 955 1117 987" type="checkbox"/>
		<input data-bbox="829 987 922 1018" type="checkbox"/>	<input data-bbox="1024 987 1117 1018" type="checkbox"/>
		<input data-bbox="829 1018 922 1050" type="checkbox"/>	<input data-bbox="1024 1018 1117 1050" type="checkbox"/>
		<input data-bbox="829 1050 922 1081" type="checkbox"/>	<input data-bbox="1024 1050 1117 1081" type="checkbox"/>
		<input data-bbox="829 1081 922 1113" type="checkbox"/>	<input data-bbox="1024 1081 1117 1113" type="checkbox"/>
		<input data-bbox="829 1113 922 1144" type="checkbox"/>	<input data-bbox="1024 1113 1117 1144" type="checkbox"/>
		<input data-bbox="829 1144 922 1176" type="checkbox"/>	<input data-bbox="1024 1144 1117 1176" type="checkbox"/>
		<input data-bbox="829 1176 922 1207" type="checkbox"/>	<input data-bbox="1024 1176 1117 1207" type="checkbox"/>
		<input data-bbox="829 1207 922 1239" type="checkbox"/>	<input data-bbox="1024 1207 1117 1239" type="checkbox"/>
		<input data-bbox="829 1239 922 1270" type="checkbox"/>	<input data-bbox="1024 1239 1117 1270" type="checkbox"/>
		<input data-bbox="829 1270 922 1302" type="checkbox"/>	<input data-bbox="1024 1270 1117 1302" type="checkbox"/>
		<input data-bbox="829 1302 922 1333" type="checkbox"/>	<input data-bbox="1024 1302 1117 1333" type="checkbox"/>
		<input data-bbox="829 1333 922 1365" type="checkbox"/>	<input data-bbox="1024 1333 1117 1365" type="checkbox"/>
		<input data-bbox="829 1365 922 1396" type="checkbox"/>	<input data-bbox="1024 1365 1117 1396" type="checkbox"/>
		<input data-bbox="829 1396 922 1428" type="checkbox"/>	<input data-bbox="1024 1396 1117 1428" type="checkbox"/>
		<input data-bbox="829 1428 922 1459" type="checkbox"/>	<input data-bbox="1024 1428 1117 1459" type="checkbox"/>
		<input data-bbox="829 1459 922 1491" type="checkbox"/>	<input data-bbox="1024 1459 1117 1491" type="checkbox"/>
		<input data-bbox="829 1491 922 1522" type="checkbox"/>	<input data-bbox="1024 1491 1117 1522" type="checkbox"/>
		<input data-bbox="829 1522 922 1554" type="checkbox"/>	<input data-bbox="1024 1522 1117 1554" type="checkbox"/>
		<input data-bbox="829 1554 922 1585" type="checkbox"/>	<input data-bbox="1024 1554 1117 1585" type="checkbox"/>
		<input data-bbox="829 1585 922 1617" type="checkbox"/>	<input data-bbox="1024 1585 1117 1617" type="checkbox"/>
		<input data-bbox="829 1617 922 1648" type="checkbox"/>	<input data-bbox="1024 1617 1117 1648" type="checkbox"/>
		<input data-bbox="829 1648 922 1680" type="checkbox"/>	<input data-bbox="1024 1648 1117 1680" type="checkbox"/>
		<input data-bbox="829 1680 922 1711" type="checkbox"/>	<input data-bbox="1024 1680 1117 1711" type="checkbox"/>
		<input data-bbox="829 1711 922 1743" type="checkbox"/>	<input data-bbox="1024 1711 1117 1743" type="checkbox"/>
		<input data-bbox="829 1743 922 1774" type="checkbox"/>	<input data-bbox="1024 1743 1117 1774" type="checkbox"/>
		<input data-bbox="829 1774 922 1806" type="checkbox"/>	<input data-bbox="1024 1774 1117 1806" type="checkbox"/>
		<input data-bbox="829 1806 922 1837" type="checkbox"/>	<input data-bbox="1024 1806 1117 1837" type="checkbox"/>
		<input data-bbox="829 1837 922 1869" type="checkbox"/>	<input data-bbox="1024 1837 1117 1869" type="checkbox"/>
		<input data-bbox="829 1869 922 1900" type="checkbox"/>	<input data-bbox="1024 1869 1117 1900" type="checkbox"/>
		<input data-bbox="829 1900 922 1932" type="checkbox"/>	<input data-bbox="1024 1900 1117 1932" type="checkbox"/>
		<input data-bbox="829 1932 922 1963" type="checkbox"/>	<input data-bbox="1024 1932 1117 1963" type="checkbox"/>
		<input data-bbox="829 1963 922 1995" type="checkbox"/>	<input data-bbox="1024 1963 1117 1995" type="checkbox"/>
		<input data-bbox="829 1995 922 2026" type="checkbox"/>	<input data-bbox="1024 1995 1117 2026" type="checkbox"/>
		<input data-bbox="829 2026 922 2058" type="checkbox"/>	<input data-bbox="1024 2026 1117 2058" type="checkbox"/>
		<input data-bbox="829 2058 922 2089" type="checkbox"/>	<input data-bbox="1024 2058 1117 2089" type="checkbox"/>
		<input data-bbox="829 2089 922 2100" type="checkbox"/>	<input data-bbox="1024 2089 1117 2100" type="checkbox"/>
Inventory			

FIG. 4F

Job Wafer Data Input			
Job Wafer Data Input			
Operator ID:	<input type="text" value="W. Bee"/>	<input data-bbox="630 562 670 604" type="button" value="..."/>	
Defect File:	<input type="text" value="fei.rff"/>	<input data-bbox="630 625 670 667" type="button" value="..."/>	
Lot ID:	<input type="text" value="060265"/>	<input data-bbox="630 688 670 730" type="button" value="..."/>	
Wafer ID:	<input type="text" value="01"/>	<input data-bbox="630 751 670 793" type="button" value="..."/>	
Job File:	<input type="text" value="TestJob.dar"/>	<input data-bbox="630 814 670 856" type="button" value="..."/>	
Product:	<input type="text" value="Train Align"/>	<input data-bbox="630 877 670 919" type="button" value="..."/>	
<input data-bbox="310 947 488 989" type="button" value="Run"/>		<input data-bbox="570 947 748 989" type="button" value="Cancel"/>	
		Class A	Class B
		<input data-bbox="829 548 919 579" type="checkbox"/>	<input data-bbox="1024 548 1114 579" type="checkbox"/>
		<input data-bbox="829 579 919 611" type="checkbox"/>	<input data-bbox="1024 579 1114 611" type="checkbox"/>
		<input data-bbox="829 611 919 642" type="checkbox"/>	<input data-bbox="1024 611 1114 642" type="checkbox"/>
		<input data-bbox="829 642 919 674" type="checkbox"/>	<input data-bbox="1024 642 1114 674" type="checkbox"/>
		<input data-bbox="829 674 919 705" type="checkbox"/>	<input data-bbox="1024 674 1114 705" type="checkbox"/>
		<input data-bbox="829 705 919 737" type="checkbox"/>	<input data-bbox="1024 705 1114 737" type="checkbox"/>
		<input data-bbox="829 737 919 768" type="checkbox"/>	<input data-bbox="1024 737 1114 768" type="checkbox"/>
		<input data-bbox="829 768 919 800" type="checkbox"/>	<input data-bbox="1024 768 1114 800" type="checkbox"/>
		<input data-bbox="829 800 919 831" type="checkbox"/>	<input data-bbox="1024 800 1114 831" type="checkbox"/>
		<input data-bbox="829 831 919 863" type="checkbox"/>	<input data-bbox="1024 831 1114 863" type="checkbox"/>
		<input data-bbox="829 863 919 894" type="checkbox"/>	<input data-bbox="1024 863 1114 894" type="checkbox"/>
		<input data-bbox="829 894 919 926" type="checkbox"/>	<input data-bbox="1024 894 1114 926" type="checkbox"/>
		<input data-bbox="829 926 919 957" type="checkbox"/>	<input data-bbox="1024 926 1114 957" type="checkbox"/>
		<input data-bbox="829 957 919 989" type="checkbox"/>	<input data-bbox="1024 957 1114 989" type="checkbox"/>
		<input data-bbox="829 989 919 1020" type="checkbox"/>	<input data-bbox="1024 989 1114 1020" type="checkbox"/>
		<input data-bbox="829 1020 919 1052" type="checkbox"/>	<input data-bbox="1024 1020 1114 1052" type="checkbox"/>
		<input data-bbox="829 1052 919 1083" type="checkbox"/>	<input data-bbox="1024 1052 1114 1083" type="checkbox"/>
		<input data-bbox="829 1083 919 1115" type="checkbox"/>	<input data-bbox="1024 1083 1114 1115" type="checkbox"/>
		<input data-bbox="829 1115 919 1146" type="checkbox"/>	<input data-bbox="1024 1115 1114 1146" type="checkbox"/>
		<input data-bbox="829 1146 919 1178" type="checkbox"/>	<input data-bbox="1024 1146 1114 1178" type="checkbox"/>
		<input data-bbox="829 1178 919 1209" type="checkbox"/>	<input data-bbox="1024 1178 1114 1209" type="checkbox"/>
		<input data-bbox="829 1209 919 1241" type="checkbox"/>	<input data-bbox="1024 1209 1114 1241" type="checkbox"/>
		<input data-bbox="829 1241 919 1272" type="checkbox"/>	<input data-bbox="1024 1241 1114 1272" type="checkbox"/>
		<input data-bbox="829 1272 919 1304" type="checkbox"/>	<input data-bbox="1024 1272 1114 1304" type="checkbox"/>
		<input data-bbox="829 1304 919 1335" type="checkbox"/>	<input data-bbox="1024 1304 1114 1335" type="checkbox"/>
		<input data-bbox="829 1335 919 1367" type="checkbox"/>	<input data-bbox="1024 1335 1114 1367" type="checkbox"/>
		<input data-bbox="829 1367 919 1398" type="checkbox"/>	<input data-bbox="1024 1367 1114 1398" type="checkbox"/>
		<input data-bbox="829 1398 919 1430" type="checkbox"/>	<input data-bbox="1024 1398 1114 1430" type="checkbox"/>
		<input data-bbox="829 1430 919 1461" type="checkbox"/>	<input data-bbox="1024 1430 1114 1461" type="checkbox"/>
		<input data-bbox="829 1461 919 1493" type="checkbox"/>	<input data-bbox="1024 1461 1114 1493" type="checkbox"/>
		<input data-bbox="829 1493 919 1524" type="checkbox"/>	<input data-bbox="1024 1493 1114 1524" type="checkbox"/>
		<input data-bbox="829 1524 919 1556" type="checkbox"/>	<input data-bbox="1024 1524 1114 1556" type="checkbox"/>
		<input data-bbox="829 1556 919 1587" type="checkbox"/>	<input data-bbox="1024 1556 1114 1587" type="checkbox"/>
		<input data-bbox="829 1587 919 1619" type="checkbox"/>	<input data-bbox="1024 1587 1114 1619" type="checkbox"/>
		<input data-bbox="829 1619 919 1650" type="checkbox"/>	<input data-bbox="1024 1619 1114 1650" type="checkbox"/>
		<input data-bbox="829 1650 919 1682" type="checkbox"/>	<input data-bbox="1024 1650 1114 1682" type="checkbox"/>
		<input data-bbox="829 1682 919 1713" type="checkbox"/>	<input data-bbox="1024 1682 1114 1713" type="checkbox"/>
		<input data-bbox="829 1713 919 1745" type="checkbox"/>	<input data-bbox="1024 1713 1114 1745" type="checkbox"/>
		<input data-bbox="829 1745 919 1776" type="checkbox"/>	<input data-bbox="1024 1745 1114 1776" type="checkbox"/>
		<input data-bbox="829 1776 919 1808" type="checkbox"/>	<input data-bbox="1024 1776 1114 1808" type="checkbox"/>
		<input data-bbox="829 1808 919 1839" type="checkbox"/>	<input data-bbox="1024 1808 1114 1839" type="checkbox"/>
		<input data-bbox="829 1839 919 1871" type="checkbox"/>	<input data-bbox="1024 1839 1114 1871" type="checkbox"/>
		<input data-bbox="829 1871 919 1902" type="checkbox"/>	<input data-bbox="1024 1871 1114 1902" type="checkbox"/>
		<input data-bbox="829 1902 919 1934" type="checkbox"/>	<input data-bbox="1024 1902 1114 1934" type="checkbox"/>
		<input data-bbox="829 1934 919 1965" type="checkbox"/>	<input data-bbox="1024 1934 1114 1965" type="checkbox"/>
		<input data-bbox="829 1965 919 1997" type="checkbox"/>	<input data-bbox="1024 1965 1114 1997" type="checkbox"/>
		<input data-bbox="829 1997 919 2028" type="checkbox"/>	<input data-bbox="1024 1997 1114 2028" type="checkbox"/>
		<input data-bbox="829 2028 919 2060" type="checkbox"/>	<input data-bbox="1024 2028 1114 2060" type="checkbox"/>
		<input data-bbox="829 2060 919 2091" type="checkbox"/>	<input data-bbox="1024 2060 1114 2091" type="checkbox"/>
		<input data-bbox="829 2091 919 2100" type="checkbox"/>	<input data-bbox="1024 2091 1114 2100" type="checkbox"/>
		<input data-bbox="829 2123 919 2100" type="checkbox"/>	<input data-bbox="1024 2123 1114 2100" type="checkbox"/>
		<input data-bbox="829 2154 919 2100" type="checkbox"/>	<input data-bbox="1024 2154 1114 2100" type="checkbox"/>
		<input data-bbox="829 2186 919 2100" type="checkbox"/>	<input data-bbox="1024 2186 1114 2100" type="checkbox"/>
		<input data-bbox="829 2217 919 2100" type="checkbox"/>	<input data-bbox="1024 2217 1114 2100" type="checkbox"/>
		<input data-bbox="829 2249 919 2100" type="checkbox"/>	<input data-bbox="1024 2249 1114 2100" type="checkbox"/>
		<input data-bbox="829 2280 919 2100" type="checkbox"/>	<input data-bbox="1024 2280 1114 2100" type="checkbox"/>
		<input data-bbox="829 2312 919 2100" type="checkbox"/>	<input data-bbox="1024 2312 1114 2100" type="checkbox"/>
		<input data-bbox="829 2343 919 2100" type="checkbox"/>	<input data-bbox="1024 2343 1114 2100" type="checkbox"/>
		<input data-bbox="829 2375 919 2100" type="checkbox"/>	<input data-bbox="1024 2375 1114 2100" type="checkbox"/>
		<input data-bbox="829 2406 919 2100" type="checkbox"/>	<input data-bbox="1024 2406 1114 2100" type="checkbox"/>
		<input data-bbox="829 2438 919 2100" type="checkbox"/>	<input data-bbox="1024 2438 1114 2100" type="checkbox"/>
		<input data-bbox="829 2469 919 2100" type="checkbox"/>	<input data-bbox="1024 2469 1114 2100" type="checkbox"/>
		<input data-bbox="829 2501 919 2100" type="checkbox"/>	<input data-bbox="1024 2501 1114 2100" type="checkbox"/>
		<input data-bbox="829 2532 919 2100" type="checkbox"/>	<input data-bbox="1024 2532 1114 2100" type="checkbox"/>
		<input data-bbox="829 2564 919 2100" type="checkbox"/>	<input data-bbox="1024 2564 1114 2100" type="checkbox"/>
		<input data-bbox="829 2595 919 2100" type="checkbox"/>	<input data-bbox="1024 2595 1114 2100" type="checkbox"/>
		<input data-bbox="829 2627 919 2100" type="checkbox"/>	<input data-bbox="1024 2627 1114 2100" type="checkbox"/>
		<input data-bbox="829 2658 919 2100" type="checkbox"/>	<input data-bbox="1024 2658 1114 2100" type="checkbox"/>
		<input data-bbox="829 2690 919 2100" type="checkbox"/>	<input data-bbox="1024 2690 1114 2100" type="checkbox"/>
		<input data-bbox="829 2721 919 2100" type="checkbox"/>	<input data-bbox="1024 2721 1114 2100" type="checkbox"/>
		<input data-bbox="829 2753 919 2100" type="checkbox"/>	<input data-bbox="1024 2753 1114 2100" type="checkbox"/>
		<input data-bbox="829 2784 919 2100" type="checkbox"/>	<input data-bbox="1024 2784 1114 2100" type="checkbox"/>
		<input data-bbox="829 2816 919 2100" type="checkbox"/>	<input data-bbox="1024 2816 1114 2100" type="checkbox"/>
		<input data-bbox="829 2847 919 2100" type="checkbox"/>	<input data-bbox="1024 2847 1114 2100" type="checkbox"/>
		<input data-bbox="829 2879 919 2100" type="checkbox"/>	<input data-bbox="1024 2879 1114 2100" type="checkbox"/>
		<input data-bbox="829 2910 919 2100" type="checkbox"/>	<input data-bbox="1024 2910 1114 2100" type="checkbox"/>
		<input data-bbox="829 2942 919 2100" type="checkbox"/>	<input data-bbox="1024 2942 1114 2100" type="checkbox"/>
		<input data-bbox="829 2973 919 2100" type="checkbox"/>	<input data-bbox="1024 2973 1114 2100" type="checkbox"/>
		<input data-bbox="829 3005 919 2100" type="checkbox"/>	<input data-bbox="1024 3005 1114 2100" type="checkbox"/>
		<input data-bbox="829 3036 919 2100" type="checkbox"/>	<input data-bbox="1024 3036 1114 2100" type="checkbox"/>
		<input data-bbox="829 3068 919 2100" type="checkbox"/>	<input data-bbox="1024 3068 1114 2100" type="checkbox"/>
		<input data-bbox="829 3099 919 2100" type="checkbox"/>	<input data-bbox="1024 3099 1114 2100" type="checkbox"/>
		<input data-bbox="829 3131 919 2100" type="checkbox"/>	<input data-bbox="1024 3131 1114 2100" type="checkbox"/>
		<input data-bbox="829 3162 919 2100" type="checkbox"/>	<input data-bbox="1024 3162 1114 2100" type="checkbox"/>
		<input data-bbox="829 3194 919 2100" type="checkbox"/>	<input data-bbox="1024 3194 1114 2100" type="checkbox"/>
		<input data-bbox="829 3225 919 2100" type="checkbox"/>	<input data-bbox="1024 3225 1114 2100" type="checkbox"/>
		<input data-bbox="829 3257 919 2100" type="checkbox"/>	<input data-bbox="1024 3257 1114 2100" type="checkbox"/>
		<input data-bbox="829 3288 919 2100" type="checkbox"/>	<input data-bbox="1024 3288 1114 2100" type="checkbox"/>
		<input data-bbox="829 3320 919 2100" type="checkbox"/>	<input data-bbox="1024 3320 1114 2100" type="checkbox"/>
		<input data-bbox="829 3351 919 2100" type="checkbox"/>	<input data-bbox="1024 3351 1114 2100" type="checkbox"/>
		<input data-bbox="829 3383 919 2100" type="checkbox"/>	<input data-bbox="1024 3383 1114 2100" type="checkbox"/>
		<input data-bbox="829 3414 919 2100" type="checkbox"/>	<input data-bbox="1024 3414 1114 2100" type="checkbox"/>
		<input data-bbox="829 3446 919 2100" type="checkbox"/>	<input data-bbox="1024 3446 1114 2100" type="checkbox"/>
		<input data-bbox="829 3477 919 2100" type="checkbox"/>	<input data-bbox="1024 3477 1114 2100" type="checkbox"/>
		<input data-bbox="829 3509 919 2100" type="checkbox"/>	<input data-bbox="1024 3509 1114 2100" type="checkbox"/>
		<input data-bbox="829 3540 919 2100" type="checkbox"/>	<input data-bbox="1024 3540 1114 2100" type="checkbox"/>
		<input data-bbox="829 3572 919 2100" type="checkbox"/>	<input data-bbox="1024 3572 1114 2100" type="checkbox"/>
		<input data-bbox="829 3603 919 2100" type="checkbox"/>	<input data-bbox="1024 3603 1114 2100" type="checkbox"/>
		<input data-bbox="829 3635 919 2100" type="checkbox"/>	<input data-bbox="1024 3635 1114 2100" type="checkbox"/>
		<input data-bbox="829 3666 919 2100" type="checkbox"/>	<input data-bbox="1024 3666 1114 2100" type="checkbox"/>
		<input data-bbox="829 3698 919 2100" type="checkbox"/>	<input data-bbox="1024 3698 1114 2100" type="checkbox"/>
		<input data-bbox="829 3729 919 2100" type="checkbox"/>	<input data-bbox="1024 3729 1114 2100" type="checkbox"/>
		<input data-bbox="829 3761 919 2100" type="checkbox"/>	<input data-bbox="1024 3761 1114 2100" type="checkbox"/>
		<input data-bbox="829 3792 919 2100" type="checkbox"/>	<input data-bbox="1024 3792 1114 2100" type="checkbox"/>
		<input data-bbox="829 3824 919 2100" type="checkbox"/>	<input data-bbox="1024 3824 1114 2100" type="checkbox"/>
		<input data-bbox="829 3855 919 2100" type="checkbox"/>	<input data-bbox="1024 3855 1114 2100" type="checkbox"/>
		<input data-bbox="829 3887 919 2100" type="checkbox"/>	<input data-bbox="1024 3887 1114 2100" type="checkbox"/>
		<input data-bbox="829 3918 919 2100" type="checkbox"/>	<input data-bbox="1024 3918 1114 2100" type="checkbox"/>
		<input data-bbox="829 3950 919 2100" type="checkbox"/>	<input data-bbox="1024 3950 1114 2100" type="checkbox"/>
		<input data-bbox="829 3981 919 2100" type="checkbox"/>	<input data-bbox="1024 3981 1114 2100" type="checkbox"/>
		<input data-bbox="829 4013 919 2100" type="checkbox"/>	<input data-bbox="1024 4013 1114 2100" type="checkbox"/>
		<input data-bbox="829 4044 919 2100" type="checkbox"/>	<input data-bbox="1024 4044 1114 2100" type="checkbox"/>
		<input data-bbox="829 4076 919 2100" type="checkbox"/>	<input data-bbox="1024 4076 1114 2100" type="checkbox"/>
		<input data-bbox="829 4107 919 2100" type="checkbox"/>	<input data-bbox="1024 4107 1114 2100" type="checkbox"/>
		<input data-bbox="829 4139 919 2100" type="checkbox"/>	<input data-bbox="1024 4139 1114 2100" type="checkbox"/>
		<input data-bbox="829 4170 919 2100" type="checkbox"/>	<input data-bbox="1024 4170 1114 2100" type="checkbox"/>
		<input data-bbox="829 4202 919 2100" type="checkbox"/>	<input data-bbox="1024 4202 1114 2100" type="checkbox"/>
		<input data-bbox="829 4233 919 2100" type="checkbox"/>	<input data-bbox="1024 4233 1114 2100" type="checkbox"/>
		<input data-bbox="829 4265 919 2100" type="checkbox"/>	<input data-bbox="1024 4265 1114 2100" type="checkbox"/>
		<input data-bbox="829 4296 919 2100" type="checkbox"/>	<input data-bbox="1024 4296 1114 2100" type="checkbox"/>
		<input data-bbox="829 4328 919 2100" type="checkbox"/>	<input data-bbox="1024 4328 1114 2100" type="checkbox"/>
		<input data-bbox="829 4359 919 2100" type="checkbox"/>	<input data-bbox="1024 4359 1114 2100" type="checkbox"/>
		<input data-bbox="829 4391 919 2100" type="checkbox"/>	<input data-bbox="1024 4391 1114 2100" type="checkbox"/>
		<input data-bbox="829 4422 919 2100" type="checkbox"/>	<input data-bbox="1024 4422 1114 2100" type="checkbox"/>
		<input data-bbox="829 4454 919 2100" type="checkbox"/>	<input data-bbox="1024 4454 1114 2100" type="checkbox"/>
		<input data-bbox="829 4485 919 2100" type="checkbox"/>	<input data-bbox="1024 4485 1114 2100" type="checkbox"/>
		<input data-bbox="829 4517 919 2100" type="checkbox"/>	<input data-bbox="1024 4517 1114 2100" type="checkbox"/>
		<input data-bbox="829 4548 919 2100" type="checkbox"/>	<input data-bbox="1024 4548 1114 2100" type="checkbox"/>
		<input data-bbox="829 4580 919 2100" type="checkbox"/>	<input data-bbox="1024 4580 1114 2100" type="checkbox"/>
		<input data-bbox="829 4611 919 2100" type="checkbox"/>	<input data-bbox="1024 4611 1114 2100" type="checkbox"/>
		<input data-bbox="829 4643 919 2100" type="checkbox"/>	<input data-bbox="1024 4643 1114 2100" type="checkbox"/>
		<input data-bbox="829 4674 919 2100" type="checkbox"/>	<input data-bbox="1024 4674 1114 2100" type="checkbox"/>
		<input data-bbox="829 4706 919 2100" type="checkbox"/>	<input data-bbox="1024 4706 1114 2100" type="checkbox"/>
		<input data-bbox="829 4737 919 2100" type="checkbox"/>	<input data-bbox="1024 4737 1114 2100" type="checkbox"/>
		<input data-bbox="829 4769 919 2100" type="checkbox"/>	<input data-bbox="1024 4769 1114 2100" type="checkbox"/>
		<input data-bbox="829 4800 919 2100" type="checkbox"/>	<input data-bbox="1024 4800 1114 2100" type="checkbox"/>
		<input data-bbox="829 4832 919 2100" type="checkbox"/>	<input data-bbox="1024 4832 1114 2100" type="checkbox"/>
		<input data-bbox="829 4863 919 2100" type="checkbox"/>	<input data-bbox="1024 4863 1114 2100" type="checkbox"/>
		<input data-bbox="829 4895 919 2100" type="checkbox"/>	<input data-bbox="1024 4895 1114 2100" type="checkbox"/>
		<input data-bbox="829 4926 919 2100" type="checkbox"/>	<input data-bbox="1024 4926 1114 2100" type="checkbox"/>
		<input data-bbox="829 4958 919 2100" type="checkbox"/>	<input data-bbox="1024 4958 1114 2100" type="checkbox"/>
		<input data-bbox="829 4989 919 2100" type="checkbox"/>	<input data-bbox="1024 4989 1114 2100" type="checkbox"/>
		<input data-bbox="829 5021 919 2100" type="checkbox"/>	<input data-bbox="1024 5021 1114 2100" type="checkbox"/>
		<input data-bbox="829 5052 919 2100" type="checkbox"/>	<input data-bbox="1024 5052 1114 2100" type="checkbox"/>
		<input data-bbox="829 5084 919 2100" type="checkbox"/>	<input data-bbox="1024 5084 1114 2100" type="checkbox"/>
		<input data-bbox="829 5115 919 2100" type="checkbox"/>	<input data-bbox="1024 5115 1114 2100" type="checkbox"/>
		<input data-bbox="829 5147 919 2100" type="checkbox"/>	<input data-bbox="1024 5147 1114 2100" type="checkbox"/>
		<input data-bbox="829 5178 919 2100" type="checkbox"/>	<input data-bbox="1024 5178 1114 2100" type="checkbox"/>
		<input data-bbox="829 5210 919 2100" type="checkbox"/>	<input data-bbox="1024 5210 1114 2100" type="checkbox"/>
		<input data-bbox="829 5241 919 2100" type="checkbox"/>	<input data-bbox="1024 5241 1114 2100" type="checkbox"/>
		<input data-bbox="829 5273 919 2100" type="checkbox"/>	<input data-bbox="1024 5273 1114 2100" type="checkbox"/>
		<input data-bbox="829 5304 919 2100" type="checkbox"/>	<input data-bbox="1024 5304 1114 2100" type="checkbox"/>
		<input data-bbox="829 5336 919 2100" type="checkbox"/>	<input data-bbox="1024 5336 1114 2100" type="checkbox"/>
		<input data-bbox="829 5367 919 2100" type="checkbox"/>	<input data-bbox="1024 5367 1114 2100" type="checkbox"/>
		<input data-bbox="829 5399 919 2100" type="checkbox"/>	<input data-bbox="1024 5399 1114 2100" type="checkbox"/>
		<input data-bbox="829 5430 919 2100" type="checkbox"/>	<input data-bbox="1024 5430 1114 2100" type="checkbox"/>
		<input data-bbox="829 5462 919 2100" type="checkbox"/>	<input data-bbox="1024 5462 1114 2100" type="checkbox"/>
		<input data-bbox="829 5493 919 2100" type="checkbox"/>	<input data-bbox="1024 5493 1114 2100" type="checkbox"/>
		<input data-bbox="829 5525 919 2100" type="checkbox"/>	<input data-bbox="1024 5525 1114 2100" type="checkbox"/>
		<input data-bbox="829 5556 919 2100" type="checkbox"/>	<input data-bbox="1024 5556 1114 2100" type="checkbox"/>
		<input data-bbox="829 5588 919 2100" type="checkbox"/>	<input data-bbox="1024 5588 1114 2100" type="checkbox"/>
		<input data-bbox="829 5619 919 2100" type="checkbox"/>	<input data-bbox="1024 5619 1114 2100" type="checkbox"/>
		<input data-bbox="829 5651 919 2100" type="checkbox"/>	<input data-bbox="1024 5651 1114 2100" type="checkbox"/>
		<input data-bbox="829 5682 919 2100" type="checkbox"/>	<input data-bbox="1024 5682 1114 2100" type="checkbox"/>

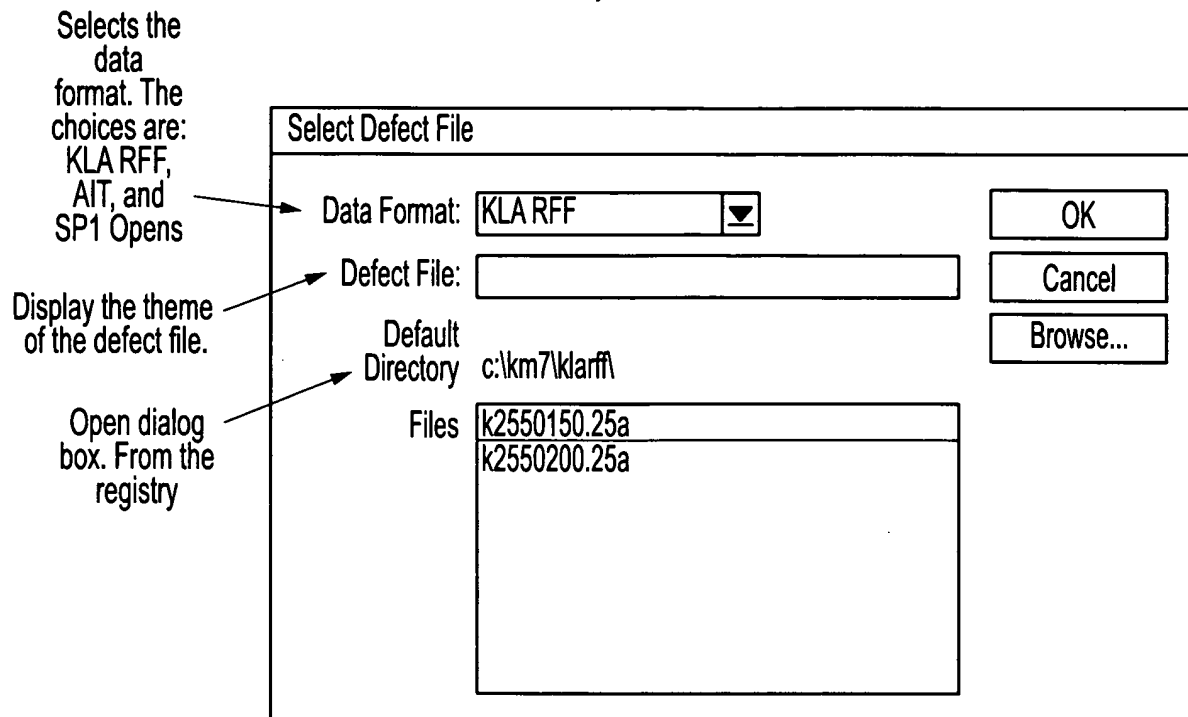


FIG. 4H

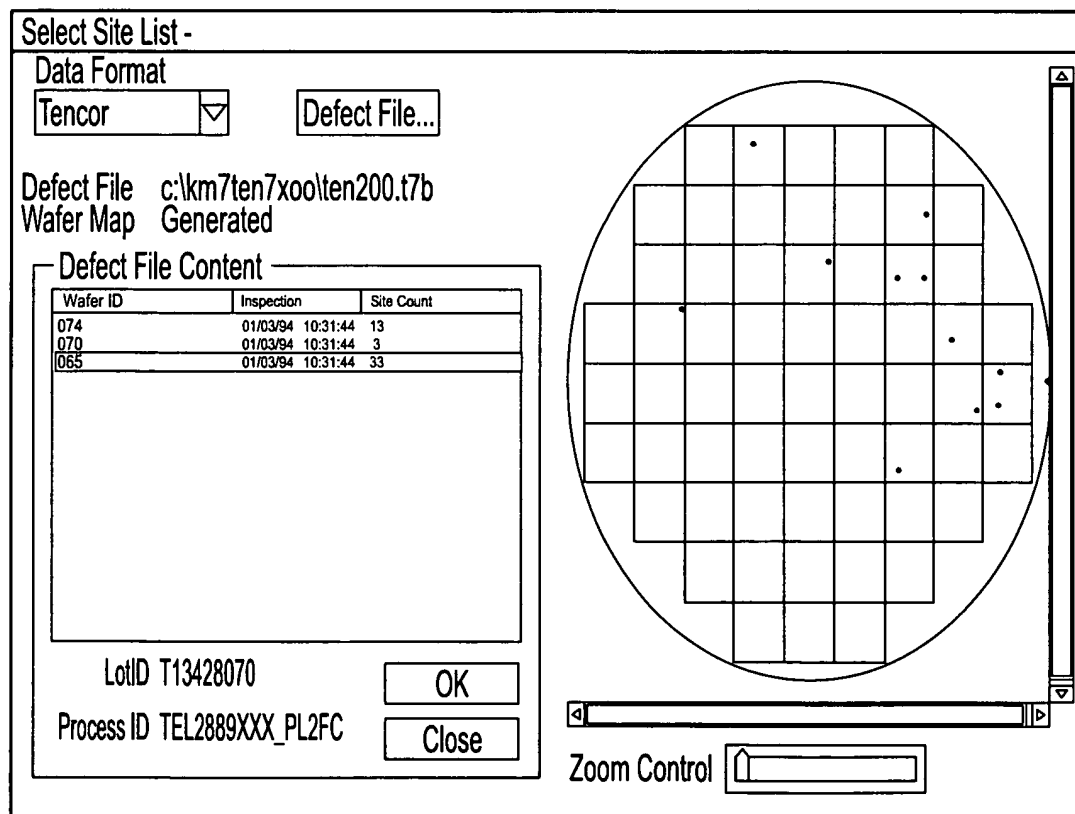


FIG. 4I

Defect File Contents		
Wafer ID	Inspection	Site Count

FIG. 4J

Column Header	Description
Wafer ID	The wafer ID as listed in the defect file.
Inspection	The date and time site list was created during inspection.
Wafer ID	The wafer ID as listed in the defect file.

FIG. 4K

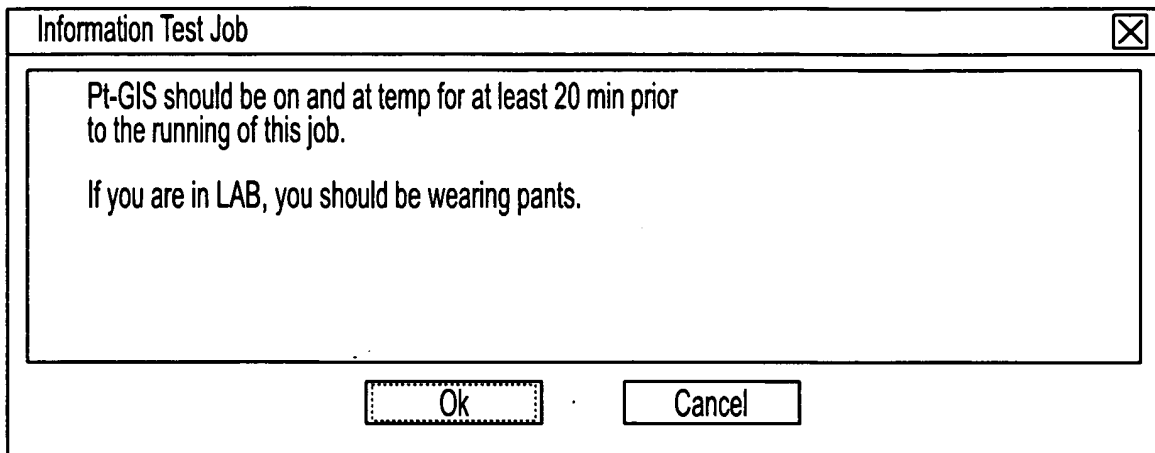


FIG. 4L

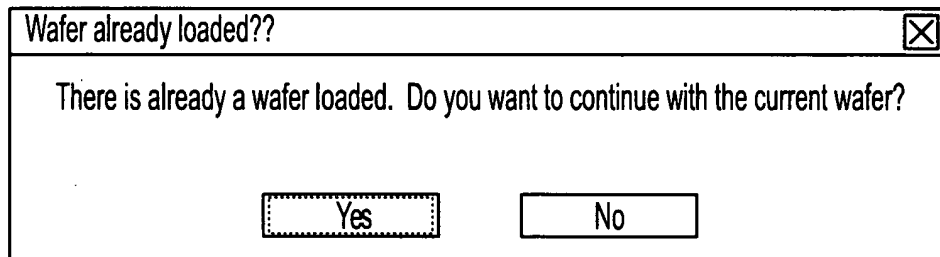


FIG. 4M

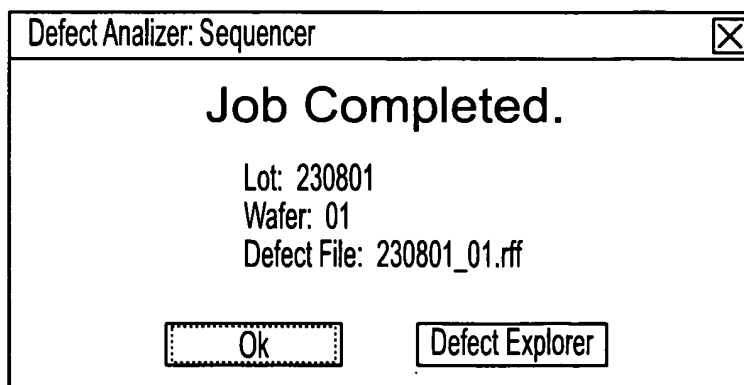


FIG. 4N

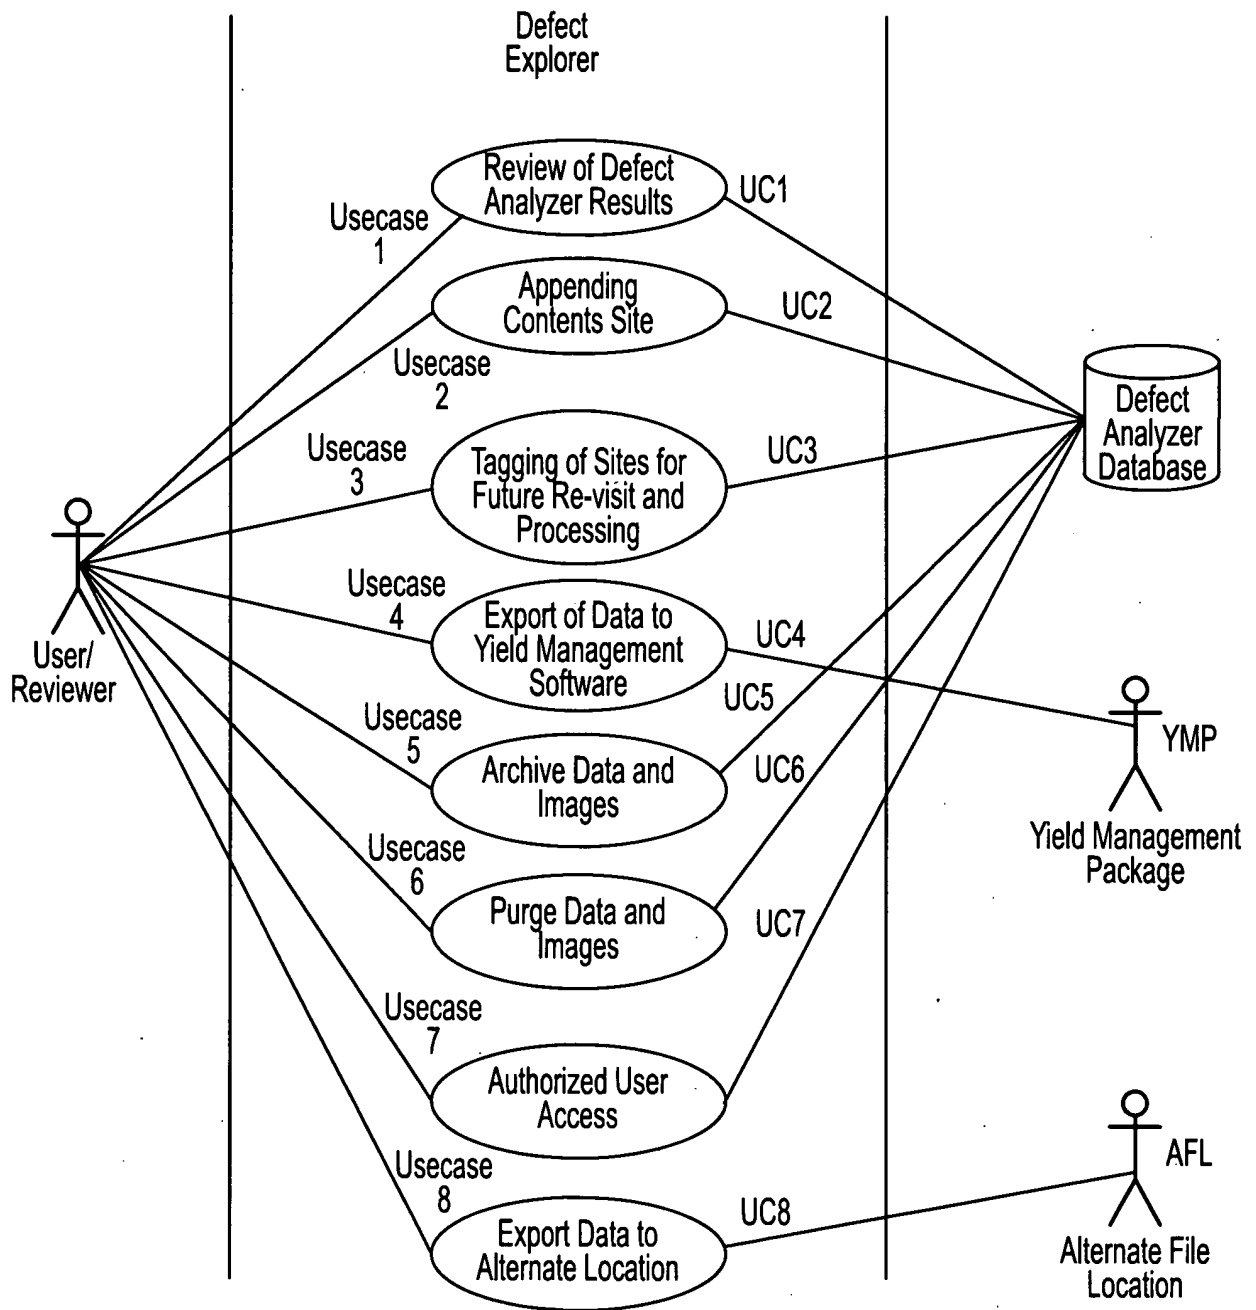


FIG. 5

FEI Defect Explore

Search Criteria: _____

Select

Lot ID

Wafer ID

Job Start Date Job End Date Search

Quick Search

My Last Day Jobs My Last Week Jobs

All Last Day Jobs All Last Week Jobs

Job Details

<input checked="" type="checkbox"/> Job name		
<input checked="" type="checkbox"/> Job name		
<input checked="" type="checkbox"/> Job name		
<input checked="" type="checkbox"/> Job name		
<input checked="" type="checkbox"/> Job name		
<input checked="" type="checkbox"/> Job name		
<input checked="" type="checkbox"/> Job name		

Delete Job Export Next> Cancel

FIG. 6A

FEI Defect Explorer ✕

View Details of Jobs
Selected For Delete

View Details
Selected For
Export

View Site Details
Tagged For Revisit

View Details of
Images Selected
For Delete

Details

Delete Job

Eport

Tag for ReVisit

Delete Images

<Back

Sign Out

FIG. 6C

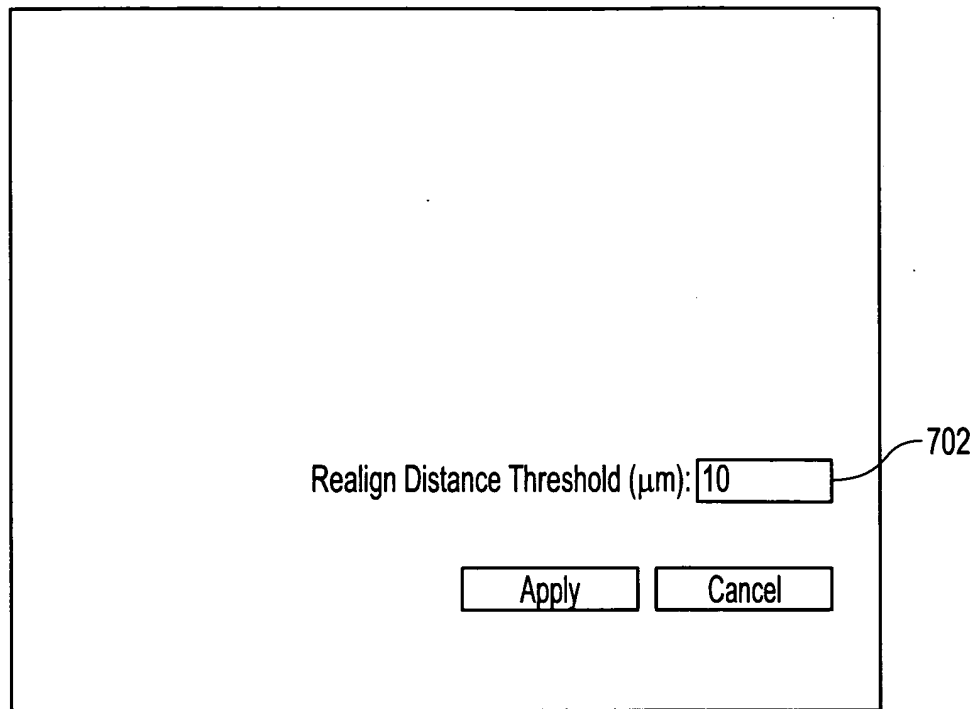


FIG. 6C

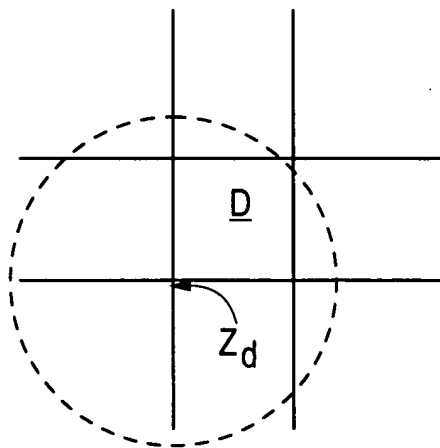


FIG. 7B

Realign		
Beam:	Type:	Assist Timeout:
<input type="text" value="Ion"/>	<input type="text" value="Beam Shift"/>	<input type="text" value="0"/>
<input type="checkbox"/> Display Match Dialog		<input type="checkbox"/> Suppress Errors
Offsets		
<input type="checkbox"/> Field Of View	X:	Y:
	<input type="text" value="0.000000"/>	<input type="text" value="0.000000"/>
Logging		
<input type="checkbox"/> Enable Logging	Log File:	
	<input type="text"/> ...	
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>		

FIG. 8A

Item	Description
Realign	
Beam	Specifies the beam to be used in the alignment.
Type	Specifies measurement or the type of alignment. BEAM SHIFT specifies an alignment using beam shift MEASURE instructs the system to measure the X, Y distance between the center of the images and the center of the fiducial mark, in pixels and microns. The result is written to the user-specified log file. STAGE MOVE specifies an alignment using a stage move.
Assist Timeout	Number of seconds a dialog box remains on screen, prompting for user intervention. If this value is 0, no dialog box appears.
Display Match Dialog	Displays the Image Match dialog box (see Image Match).
Suppress Errors	When this option is selected, the system ignores image recognition errors. If ENABLE LOGGING is selected, image recognition errors are written to the user-specified log file.
Offsets:	
Field of View	Specifies a proportional shift of the field of view. When this option is selected, the system shifts the field of view by the proportion of the field of view specified in X and Y. When this option is not selected, the system shifts the field of view by the distance in microns specified in X and Y.
X,Y	Specify the distance by which the system shifts the field of view during alignment. When FIELD OF VIEW is selected, the values specified in X and Y denote a portion of the field of view-e.g., a value of 0.1 equals 10% of the field of view. In one embodiment, acceptable values are 0-1. When FIELD OF VIEW is not selected, the system shifts the field of view by the distance in microns specified in X and Y.
Logging:	
Enable Logging	When this option is selected and a log file is specified, the system logs the following information: Name and path of the image file used for realignment X location of the fiducial in pixels and microns Y location of the fiducial in pixels and microns When MEASURE is selected for TYPE, the X, Y distance between the center of the image and the center of the fiducial mark, in pixels and microns. If the fiducial is not found, the system writes "Fail" to the log file.
Log File	Name and path of the specified log file. Use the adjacent Browse button to navigate to the desired directory.

FIG. 8B

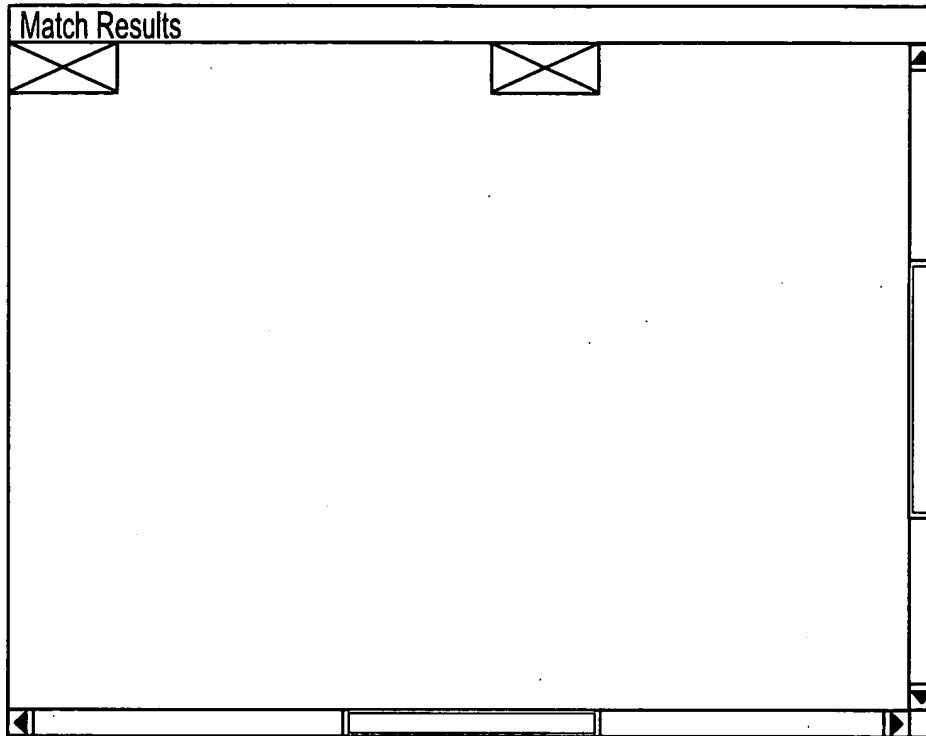


FIG. 8C

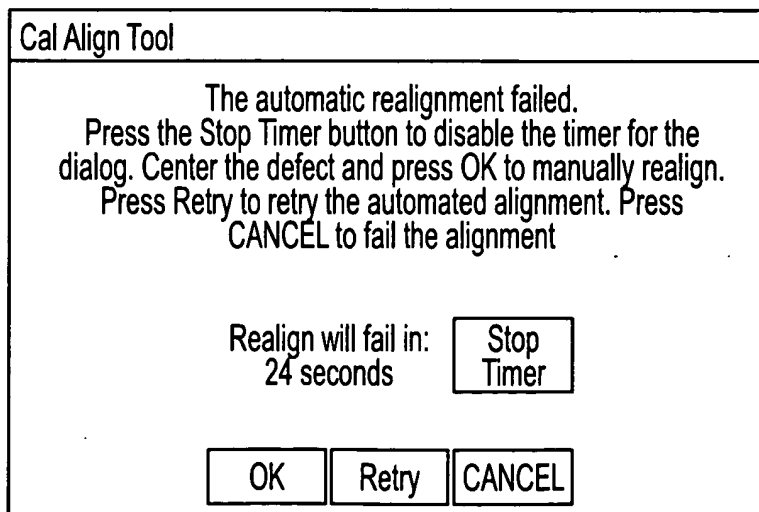


FIG. 8D

Cross Section Settings

Deposition	Bulk Mill	Cross Section
Material File <div style="border: 1px solid black; padding: 2px; display: flex; justify-content: space-between;">pt_high.mtr▼</div>	Material File <div style="border: 1px solid black; padding: 2px; display: flex; justify-content: space-between;">si.mtr▼</div>	Material File <div style="border: 1px solid black; padding: 2px; display: flex; justify-content: space-between;">si.mtr▼</div>
Width <div style="border: 1px solid black; padding: 2px 10px;">10.00</div> %	Width <div style="border: 1px solid black; padding: 2px 10px;">10.00</div> %	Width <div style="border: 1px solid black; padding: 2px 10px;">10.00</div> %
Height <div style="border: 1px solid black; padding: 2px 10px;">10.00</div> %	# of Cuts <div style="border: 1px solid black; padding: 2px 10px;">10.00</div>	Height <div style="border: 1px solid black; padding: 2px 10px;">10.00</div> %
Depth <div style="border: 1px solid black; padding: 2px 10px;">0.50</div> μm	Maximum Total Time (Bulk Mill & Cross Section) <div style="border: 1px solid black; padding: 2px 10px;">20.00</div> Seconds	

Y Offset

 Current Offset: 0.00 μm

Apply

Cancel

FIG. 9A

Item	Description
Description	
Material File	Displays a dropdown menu for selecting a material file (.mtr). The list contains an entry for every material file available on the system.
Width	Width of the specified cross section (X), as a percentage of the field of view.
Height	Height of the specified cross section (Y), as a percentage of the field of view. The protective coat will be centered about the location of the cross-section target line.
Depth	Depth of the specified cross section, in microns.
Bulk Mill:	
Number of Cuts	Number of cuts to be made in the bulk mill.
Cross Section:	
Maximum Total Time	As in Deposition group, above.
	Sets the total pattern time for the bulk mill and cross-section patterning Defect Analyzer uses this value to select the apertures used for bulk milling and cross-sectioning, based on the specified pattern area, depth, and material file.
Y Offset	Displays a horizontal yellow line in the image quadrant, marking the desired upper boundary of the cross section. Click anywhere in the field of view to set the location of this yellow line, then click OK in the accompanying dialog box. For further information, see "Setting Y Offset" on page 4-14.

FIG. 9B

Fiducial Tool Configuration

Scan
Speed
Matrix

	Low	Med	High
Fast	0.028	0.091	0.362
-	0.045	0.181	0.724
-	0.136	0.543	2.173
Slow	0.396	1.584	6.337

Integer 1 ▼

Bitmap: ...

Size (%FOV)

Defect: 40.000000

Fiducial: 10.000000

Size (%FOV)

X: 30.000000

Y: 0.000000

GIS: None ▼

Depth: 1.000000

Configure EBeam Realign

Configure IBeam Realign

Config EBeam BMP Realign

Config IBeam BMP Realign

Apply

Cancel

FIG. 10A

Item	Description
Scan speed matrix	Sets the frame time and resolution used in ion beam and electron beam images collected after milling of the fiducial mark. These images are used for subsequent image recognition.
Integrate	Sets the number of frames to be integrated to allow accumulative noise reduction.
Bitmap	Defect Analyzer converts the specified bitmap to a stream file, based on the grayscale levels of individual pixels in the bitmap. Pixels above the median brightness in the grayscale are omitted from the stream file; pixels below the median brightness are converted to points.
Size (%FOV)	
Defect	Proportion of the field of view to be occupied by the defect.
Fiducial	Size of the fiducial mark, as a percentage of the field of view.
Fiducial Offset From Center (%FOV)	Sets the offset between the center of the image and the center of the fiducial mark, in X and Y, as a percentage of the field of view.
GIS	Selects the GIS to be used in milling the fiducial. The List contains an entry for every beam chemistry available on the system.
Depth	Depth of the fiducial mark, in microns.
Configure EBeam Realign Configure IBeam Realign Configure IBeam BMP Realign, Configure EBeam BMP Realign	CONFIGURE EBEAM BMP REALIGN and CONFIGURE IBEAM BMP REALIGN configure the image recognition software for initial matches between a fiducial mark and the bitmap used as the milling pattern.

FIG. 10B

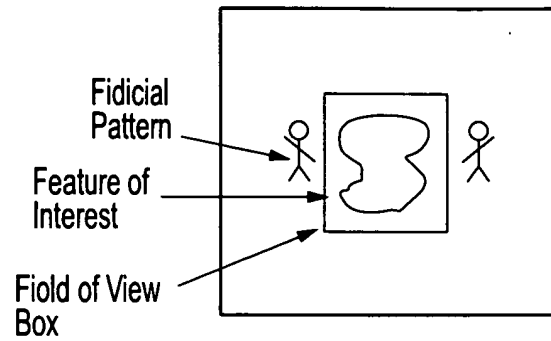


FIG. 10C

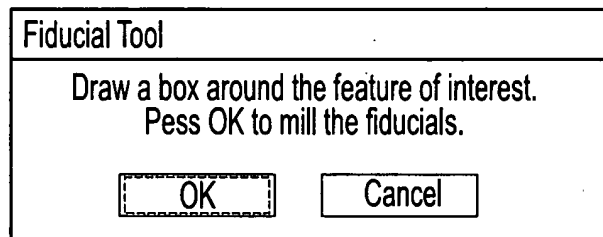


FIG. 10D

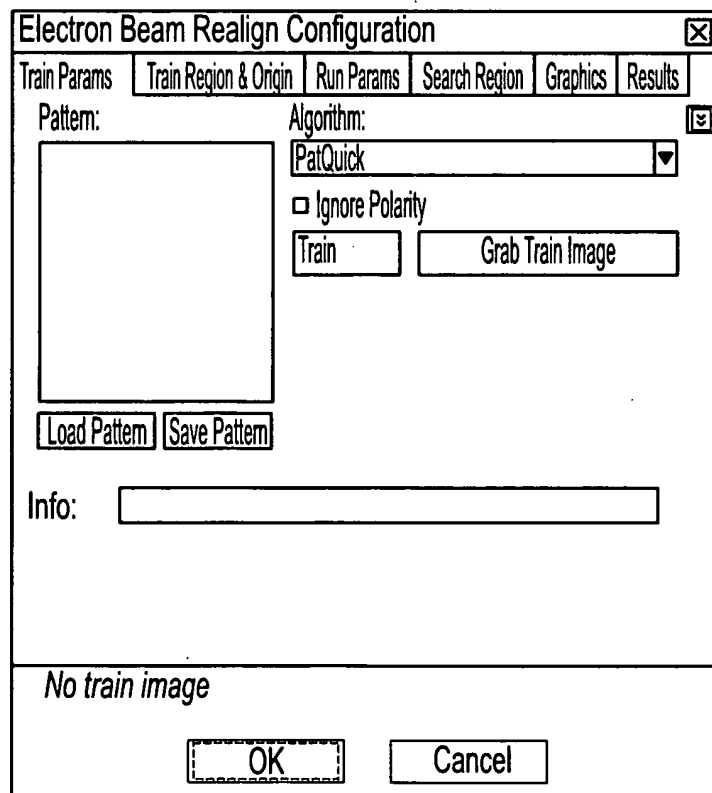


FIG. 10E

Electron Beam Realign Configuration ✖	
Train Params	Train Region & Origin
<div>Train Region</div> <div>Region Mode: Pixel Aligned Bounding Box Adjust Mask ▼</div> <div>Region Shape: CogRectangleAffine ▼</div> <div>Selected Space Name: *Use Input Image Space ▼</div> <div>Select Mode <input checked="" type="radio"/> Origin <input type="radio"/> Center <input type="radio"/> 3 Points </div> <div> Origin X <input type="text" value="70"/> <input type="button" value="↑"/> <input type="button" value="↓"/> Origin Y <input type="text" value="70"/> <input type="button" value="↑"/> <input type="button" value="↓"/> Screen XLen <input type="text" value="20"/> <input type="button" value="↑"/> <input type="button" value="↓"/> Screen Aspect <input type="text" value="1"/> <input type="button" value="↑"/> <input type="button" value="↓"/> XY Rotation <input type="text" value="0"/> <input type="button" value="↑"/> <input type="button" value="↓"/> deg Skew <input type="text" value="0"/> <input type="button" value="↑"/> <input type="button" value="↓"/> deg </div> <div style="text-align: center; margin-top: 5px;"><input type="button" value="Fit in image"/></div>	<div>Train Origin</div> <div>Selected Space Name: *Use Input Image Space</div> <div> Origin X <input type="text" value="70"/> <input type="button" value="↑"/> <input type="button" value="↓"/> Origin Y <input type="text" value="70"/> <input type="button" value="↑"/> <input type="button" value="↓"/> Screen XLen <input type="text" value="20"/> <input type="button" value="↑"/> <input type="button" value="↓"/> Screen Aspect <input type="text" value="1"/> <input type="button" value="↑"/> <input type="button" value="↓"/> XY Rotation <input type="text" value="0"/> <input type="button" value="↑"/> <input type="button" value="↓"/> deg Skew <input type="text" value="0"/> <input type="button" value="↑"/> <input type="button" value="↓"/> deg </div> <div style="text-align: center; margin-top: 10px;"><input type="button" value="Center Origin"/></div>
<div>No train image</div> <div style="text-align: center; margin-top: 10px;"> <input type="button" value="OK"/> <input type="button" value="Cancel"/> </div>	

FIG. 10F

Electron Beam Realign Configuration									
Train Params		Train Region & Origin		Run Params		Search Region		Graphics	
<div>Algorithm:</div> <div>Best Trained</div> <div>Approx no. to find: 1</div> <div>Accept threshold: 0.5</div> <div><input type="checkbox"/> Timeout 50000 ms</div>									
Angle	Nominal		Low		High		Overlap		
Angle	0	deg	-45	deg	45	deg	360	deg	
Scale	1		0.8		1.2		1.4		
ScaleX	1	ms	0.0		1.2		1.4		
ScaleY	1	ms	0.8		1.2		1.4		
<input checked="" type="checkbox"/> Use Pattern Grain Limits									
Compare	4		Contrast thresh:		10		XY overlap:		
fine	1						0.0		
No train image									
<div>OK</div> <div>Cancel</div>									

FIG. 10G

Electron Beam Realign Configuration ✕

Train Params Train Region & Origin Run Params Search Region Graphics Results

Train Region

☐ Show coarse ☐ Show fine

Results

☒ Show origins ☐ Show coordinate axes
☒ Show match regions

Diagnostics

☐ Show match features ☐ Show coordinate axes
☐ Show search region
Note - must re-run the tool to see the effect.

No train image

OK Cancel

FIG. 10H

Cross Section Settings

Beam:	Realign Using Beam Shift:	
<div>Electron</div>	<div>Yes</div>	
Enable Logging:	Display Match Dialog	Assist Timeout(s):
<div>No</div>	<div>No</div>	<div>0</div>
	X Offset:	Y Offset:
	<div>0.000000</div>	<div>0.000000</div>
<div>Apply</div> <div>Cancel</div>		

FIG. 11A

Item	Description
Beam	Specifies the beam to be used in the alignment.
Realign Using Beam Shift	Specifies the type of alignment to be made. YES specifies an alignment made using beam shift. NO specifies an alignment made using a stage move. For best results, realign the electron beam with stage moves and the ion beam with beam shift.
Enable Logging	When this option is selected, the system logs the following information: Name and path of the image file used for realignment X location of the fiducial in pixels and microns Y location of the fiducial in pixels and microns If the fiducial is not found, the system writes "Fail" to the log file.
Display Match Dialog	Displays the Image Match dialogue (see "Image Match" on page 4-10)
Assist Timeout(s)	Number of seconds before a dialog box appears, prompting for user intervention. If this value is 0, no dialog box appears.
FOV Offset	Specifies a proportional shift of the field of view. When this option is selected, the system shifts the field of view by the proportion of the field of view specified in X and Y. When this portion is not selected, the system shifts the field of view by the distance in microns specified in X and Y.
X Offset, Y Offset	Specify the distance by which the system shifts the field of view during alignment. When FIELD OF VIEW is selected, the values specified in X and Y denote a portion of the field of view-e.g., a value of 0.1 equals 10% of the field of view. Acceptable values are 0-1. When FIELD OF VIEW is not selected, the system shifts the field of view by the distance in microns specified in X and Y.

FIG. 11B

EDS Settings

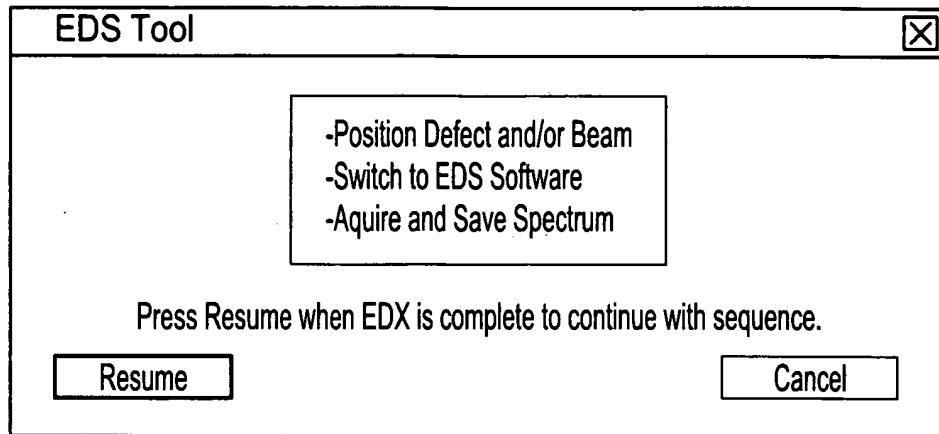
Beam:

☐ Auto CB ☐ Spot Mode Voltage kV

FIG. 12A

Item	Description
Auto CB	Performs automatic contrast and brightness
Spot Mode	Selects Spot as the scanning mode.
Voltage	Voltage to be used to acquire spectrum.

FIG. 12B

*FIG. 12C*

Interface items	Description
Resume	Associates the spectrum with the current site and continues automated processing.
Voltage	Does not put anything into the database and gives you the option to fail the site.

FIG. 12D

Get System Settings		Select All
Set Settings Tool Identifier		Stage
<input checked="" type="radio"/> A <input type="radio"/> B <input type="radio"/> C <input type="radio"/> D <input type="radio"/> E <input type="radio"/> F	<input type="checkbox"/> X Y <input type="checkbox"/> Z <input type="checkbox"/> R <input type="checkbox"/> T	
Beam Settings		
<input type="checkbox"/> Primary Beam <input type="checkbox"/> Detector <input type="checkbox"/> Scan Rotation		
Electron Beam		Ion Beam
<input type="checkbox"/> Focus <input type="checkbox"/> Stig <input type="checkbox"/> kV <input type="checkbox"/> Spot <input type="checkbox"/> Electron Beam Shift <input type="checkbox"/> UHR/Search <input type="checkbox"/> Magnification <input type="checkbox"/> Contrast/Brightness		<input type="checkbox"/> Focus <input type="checkbox"/> Stig <input type="checkbox"/> Ion Aperature <input type="checkbox"/> Ion Beam Shift <input type="checkbox"/> Magnification <input type="checkbox"/> Contrast/Brightness
Resume		Cancel

FIG. 13A

Item	Description
Select All/De-Select All	Selects or deselects every option in the Stage, Beam Settings, Electron Beam, and Ion Beam groups.
Set Settings Tool Identifier	Identifies a set of stored settings
Stage	Contains options for recording the positions of the five independent axes.
Beam Settings	Contains options for recording the following current beam settings.
Primary Beam	
Detector	
Scan Rotation	
Electron Beam	Contains options for recording the current electron beam parameters. Focus, Stigmation, Accelerating voltage (kV), Spot size, Beam shift, Mode (UHR or Search), Magnification, Contrast/Brightness
Ion Beam	Contains options for recording the current electron beam parameters. Focus, Stigmation, Apperatus, Beam shift, Magnification, Contrast/Brightness

FIG. 13B

Grab Image Settings

☒ E-Beam ☐ I-Beam

Detector

Voltage (kV) ▼

Spot Size ▼

Ion Settings

Aperature ▼

Detector

- ☒ TLD-S
- ☐ TLD-B
- ☐ TLD-C
- ☐ TLD-D
- ☐ CDM-E
- ☐ CEM-I

Mode

- ☒ UHR
- ☐ Search

Integrate

Resolution

	Low	Med	High
Fast	0.028	0.091	0.362
-	0.045	0.181	0.724
-	0.136	0.543	2.173
Slow	0.396	1.584	6.337

Integer ▼

Magnification

- ☐ FOV
- ☒ Fixed ▼

FIG. 13C

Item	Description
E-Beam	Use electron beam to grab an image.
I-Beam	Use ion beam to grab an image.
Electron Settings:	
Voltage (kV)	Active only for the electron beam. Specify the accelerating voltage.
Spot Size	Active only for the electron beam. Specify the spot size.
Detector	Select the detector used to collect the image. Available selections are dependent on the selected mode and beam. Refer to the xP DualBeam Workstation User's Guide (PN 25417) for information about detector types.
Mode	Active only for the electron beam. Select Search mode for low magnifications and UHR mode for higher magnifications.
Image:	
ACB	Automatically adjusts contrast and brightness using the stored values for comparison.
AutoFocus	Automatically corrects the focus, based on the system sharpness criteria.
AutoStig	Automatically corrects stigmatism, based on the system sharpness criteria. Available for the electron beam.
Data Bar	Save the databar as seen into the image.
Magnification	Specifies the magnification used to grab the image. Select either the field-of-view(determined by the Fiducial tool) or choose from a range of preset magnifications.
Ion Aperture	Active only for the ion beam. Sets the ion aperture.
Resolution	Selects the scan rate and resolution for grabbing a single frame. The values are those available for Grab Image.
Integrate	Specifies the number of collected images to be summed to generate the final image.

FIG. 13D

Pattern Settings

<input type="checkbox"/> Use FOV%	Overlap 0.00 %	Primary Beam <input checked="" type="radio"/> I-Beam <input type="radio"/> E-Beam
Dimensions X: 0.00 μm Y: 0.00 μm Z: 0.00 μm	Dwell 0.00 μs	Material File None ▼
Center Position X: 0.00 μm Y: 0.00 μm	Time 00:00:00 μs	Material File CleaningCrossSection ▼
	<input type="checkbox"/> Always Realign	Rotation 0.00 Degrees
<input type="button" value="Show Pattern"/>		<input type="button" value="Apply"/>

FIG. 14A

Item	Description
Use FOV%	Converts X and Y coordinates in Dimensions and Center Position to a percentage of the field of view. When this option is selected X and Y coordinates in Dimensions and Center Position denote a percentage of the field of view. When this option is not selected, X and Y coordinates in Dimensions and Center Position are in microns.
Dimensions	Sets the X, Y, and Z pattern dimensions. When Pattern Type is set to Circle, X and Y are replaced by Rin (inner radius) and Rout (outer radius). Shows the stage X and Y coordinates of the center of the pattern relative to the center of the field of view.
Center Position	
Overlap	
Dwell	Dwell time per pixel. Not available when a material file is selected. Time for milling displayed as either hh:mm:ss or ss:ttt. When this portion is selected, the system always realigns to the fiducial mark before milling the specified pattern. When this option is selected, the system only realigns to the fiducial mark when an aperture has changed or a GIS needle has been inserted.
Time	
Always Realign	
Show Pattern/Remove Pattern	Displays the currently defined pattern. When a pattern is already on screen, removes that pattern.
Primary Beam	Select I-Beam or E-BEAM as the beam that will be used for patterning. Select the material file for your application. Refer to the xP DualBeam Workstation User's Guide (PN 25417) for information about material files. Defines the pattern. Refer to the xP DualBeam Workstation User's Guide (PN 25417) for information about available patterns. Rotates the pattern about its center to the specified angle.
Material File	
Pattern Type	
Rotation	

FIG. 14B

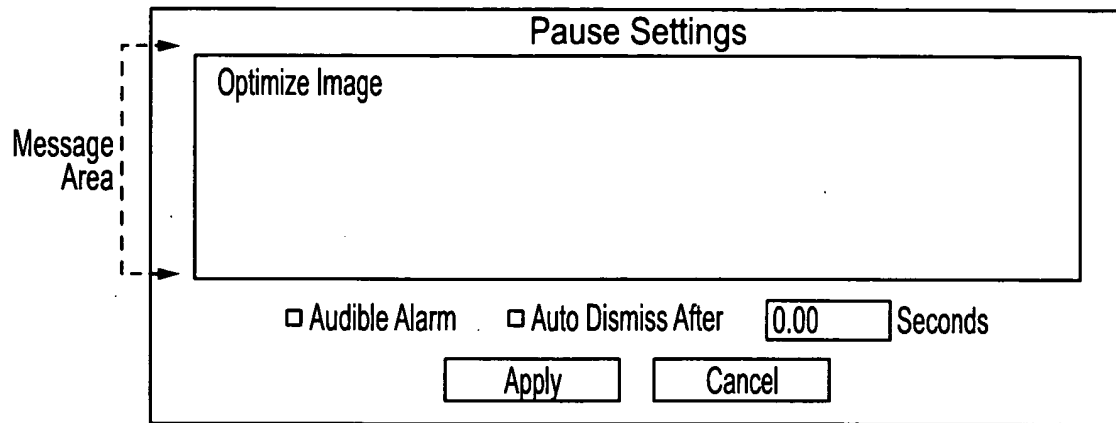


FIG. 15A

Item	Description
Message area	Defines actions the user should take before continuing processing.
Audible alarm	Cause an alarm to sound when the Pause dialog box displays during a job.
Auto dismiss	Selects if the Pause dialog box should time out. Otherwise, the Pause dialog box must be manually dismissed. The number of seconds specifies the fixed amount of time Pause dialog box is displayed during a job.

FIG. 15B

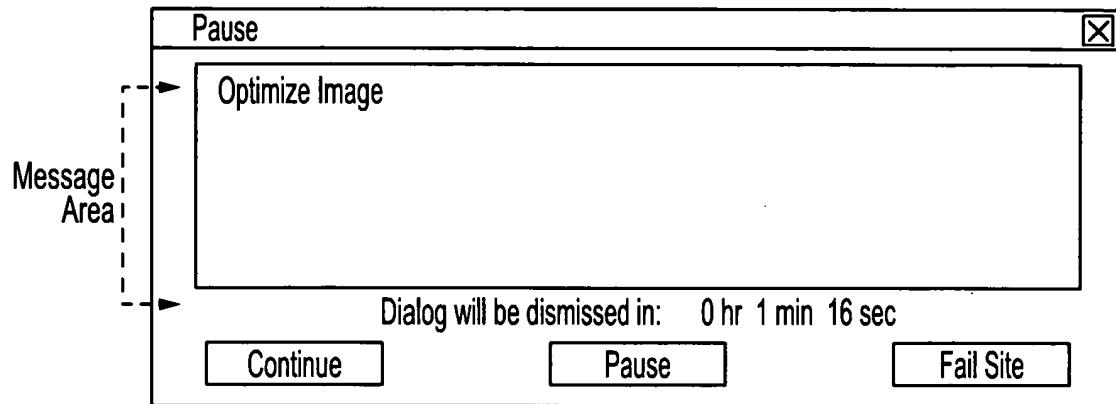


FIG. 15C

Item	Description
Message area	Defines action operator should take before proceeding with the process. The text cannot be modified during runtime.
Timeout clock	The time the dialog box will be displayed during a job. If the operator does not interact with the tool, the Pause dialog box times out as specified and the process automatically continues.
Continue	Click to continue processing the current site. The site list grid will show that the site passed.
Pause/Resume	Stop/restarts the timer. (This button is inactive if AUTO DISMISS was not selected during configuration.) The process waits for the operator to click either CONTINUE or FAIL.
Fail Site	Click to fail the current site. Further processing at the site is aborted. Processing starts at the next site. The site list grid will show that the site failed. If the entire job is to be aborted, the operator can click ABORT in the Run Tool Sequence dialog box

FIG. 15D

Get System Settings

Get Settings Identifier

☒ A
 ☐ B
 ☐ C
☐ D
 ☐ E
 ☐ F

FIG. 16

Slice and View Settings

Slice

☐ Size of Slices μm
☐ Limit max# of slices to
☐ Number of Slices
 Depth μm ☐ Hair Cut
 Material File
 Max Process Time sec

Metal Deposition

☐ Add Protective Coating
 Material File
 Pattern Width % of Defect
 Pattern Height μm

Image

	Low	Med	High
Fast	0.028	0.091	0.362
-	0.045	0.181	0.724
-	0.136	0.543	2.173
Slow	0.396	1.584	6.337

Integrate

☐ Data Bar ☐ Track Image
☐ ACB ☐ Auto Focus
 Field of View: % of X-section

Electron HV and Spot Size

kV Spot

Mode

☐ UHR
☒ Search

Detector

☒ TLD-S ☐ TLD-D
☐ TLD-B ☐ CDM-E
☐ TLD-C ☐ CEM-I

FIG. 17A

Item	Description
Slice:	User selects either SIZE OF SLICES or NUMBER OF SLICES.
Size of Slices	Specifies the slice size in microns. The number of slices to be milled will be calculated by dividing the size of the defect (determined by fiducial tool) by the size of the slices.
Limit max # of slices to	The Maximum number of slices to be made in the Slice and View area.
Number of Slices	Specifies the number of slices to be milled. The height of each slice is determined by the software dividing the value specified for height (y) by the number of slices. Where is height from? A maximum of 100 individual patterns can be displayed. If the tool calls for more than 100 slices, an outline indicating the overall area to be sliced is displayed.
Depth	Specifies the pattern depth in microns.
Half Cut	Mills only half way through the defect selected (up to the center cross).
Material File	Displays a dropdown list of selecting a material file (.mtr). The list contains an entry for every material file available on the system. The default material file is si.mtr.
Max Process Time	The Maximum time process may occur
Metal Deposition: Add Protective Coating	If this option is selected, a protective layer will be centered about the Slice and View area. The scale will be set in the job builder configuration and based upon the size of the slice and view area. If protective coating is not selected, the fields associated with it should be inactive.
Material File	Displays a dropdown list for selecting a material file (.mtr). The list contains an entry for every material file available on the system. the default material file is either pt_high mtr.
Pattern Width	Specifies the pattern width, as a percentage of the defect size.
Pattern Height	Specifies the pattern height, in microns.
Image: Scan Speed Matrix	Sets the frame time and resolution used for the electron beam images of the cross-section face. These values correspond generally to the faster continuous scan rates available in xP. Refer to the xP DualBeam Workstation User's Guide for information about the available resolutions.
Integrate	Number of frames to integrate for accumulative noise reductions.
Data Bar	Includes the databar configured in xP in the image.
ACB	Selects automatically adjusting contrast and brightness, using the stored values for comparison.
Track Image	Adjusts the electron beam shaft to keep the face of the cross section centered in the field of view.
Auto Focus	Initiates automated focus before the system begins capturing electron beam images.
Field of View	Specifies the field of view used for electron beam images of the cross-section face, as a percentage of the cross-section.
Electron HV and Spotsizes:	kV specifies the electron beam accelerating voltage, Select from the range of voltages available for the currently selected imaging mode. SPOTSIZE specifies the actual focused area of the electron beam on the sample.
Mode	Select UHR or Search as the imaging mode..
Detector	Select the detector to be used for the electron beam images. Choices are determined by the currently selected imaging mode.

FIG. 17B

Auto Script Settings

Auto Script Settings

Log File Path

FIG. 18A

Item	Description
Script File Path	Name and path of the AutoScript file.
Browser	Accesses the Open dialog box so you can navigate to a script file.
Edit File	Opens the selected script file in the Windows Notepad text editor.
Log File Path	Name and path of the log file.
Browse	Accesses the Open dialog box so you can navigate to the log file.

FIG. 18B

System Settings

Get Current System Settings

Stage

☐ Absolute
☒ Relative

☐ X
☐ Y
☐ Z
☐ R
☐ T

Beam

☐ Primary Beam
☒ Electron
☐ Ion

☐ Magnification

☐ Scan Rotation

Electron Beam

☐ kV
☐ FWD
☐ Spot
☐ Mode
☐ UHR
☒ Search

Ion Beam

☐ Ion Aperture

FIG. 19A

Item	Description
Get Current System Setting	Gets the current system settings for all options.
Stage:	
Absolute	Chooses coordinates measured from the center of the stage.
Relative	Chooses coordinates measured from the current location on the stage
X,Y,Z,R,T	Sets the positions of the five independent axes.
Beam:	
Primary Beam	Sets the ion beam or electron beam as the primary beam. The selected beam sets the magnification and other image data of the current image window.
Magnification	Sets magnification to the specified value.
Scan Rotation	Sets scan rotation to the specified value.
Electron Beam:	Sets scan rotation to the specified value.
kV	Sets the accelerating voltage for the electron beam. Choose a value from the adjacent dropdown list.
FWD	Sets the electron beam focus to the free working distance specified in the adjacent edit box.
Spot	Sets the aperture size for the electron beam. Choose a value from the adjacent dropdown box.
Mode	Selects the mode for the electron beam.
Ion Beam:	
Ion Aperture	Sets the ion beam current to the aperture (inpA) specified in the adjacent dropdown list.

FIG. 19B

ADR Parameters		DThresh Display:	
Die Offset (x-axis)	5000	12	3
<input type="checkbox"/> Center Defect	%FOV Text2	Noise Filter:	
<input type="checkbox"/> Probe Eucentric for Reference Image?		Full	
<input type="checkbox"/> use system state		Electron HV and Spot Size	
<input checked="" type="radio"/> E-Beam <input type="radio"/> I-Beam		1kV	3
Magnification		Ion Aperture	
<input type="radio"/> FOV		3	
<input checked="" type="radio"/> Fixed 2500X			
Detector	Mode	Resolution Med-5.66	
<input checked="" type="radio"/> TLD-S	<input checked="" type="radio"/> UHR	<input checked="" type="checkbox"/> Save Data Bar On Image	
<input type="radio"/> TLD-B	<input type="radio"/> Search	<input type="checkbox"/> ACB	
<input type="radio"/> TLD-C		<input type="checkbox"/> AutoFocus	
<input type="radio"/> TLD-D		<input type="checkbox"/> AutoStig	
<input type="radio"/> CDM-E	Integrate		
<input type="radio"/> CEM-I	1		

FIG. 20A

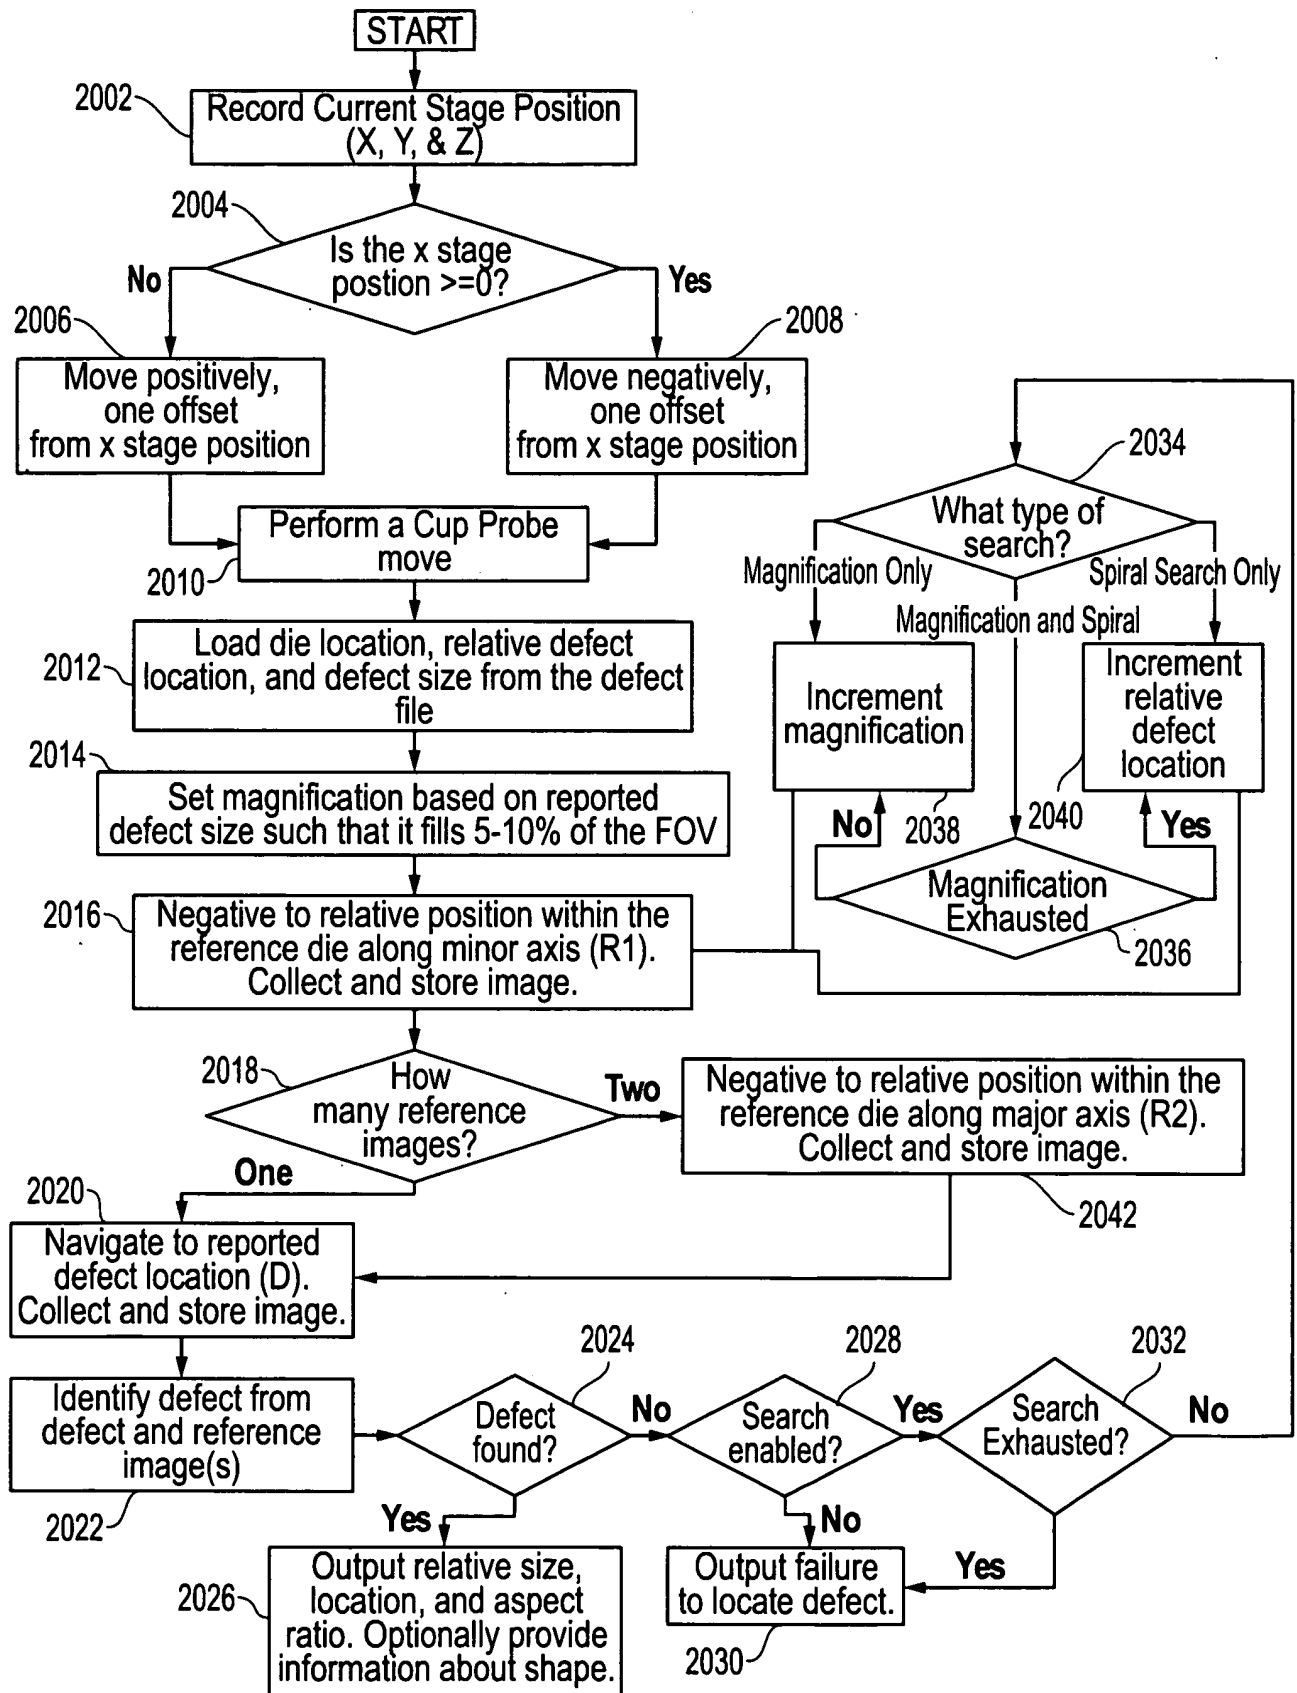


FIG. 20B

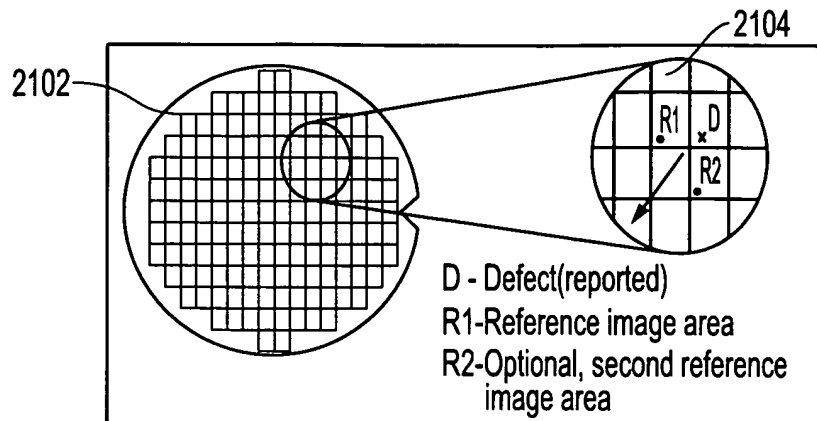


FIG. 21

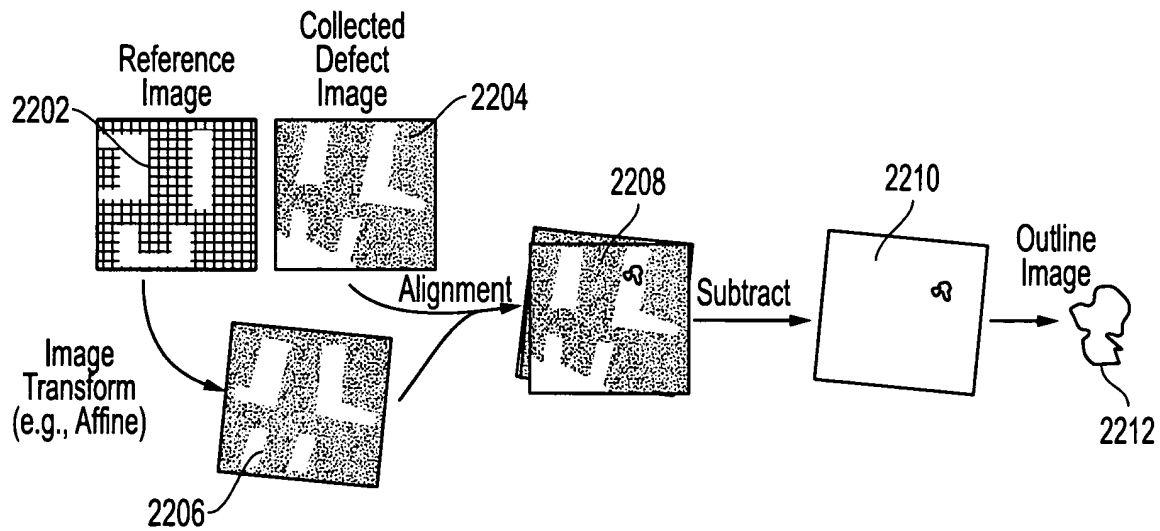


FIG. 22

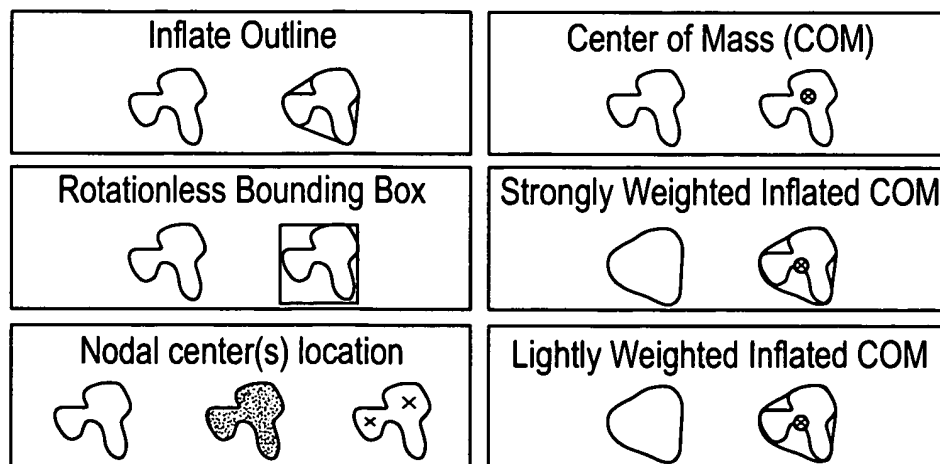


FIG. 23A

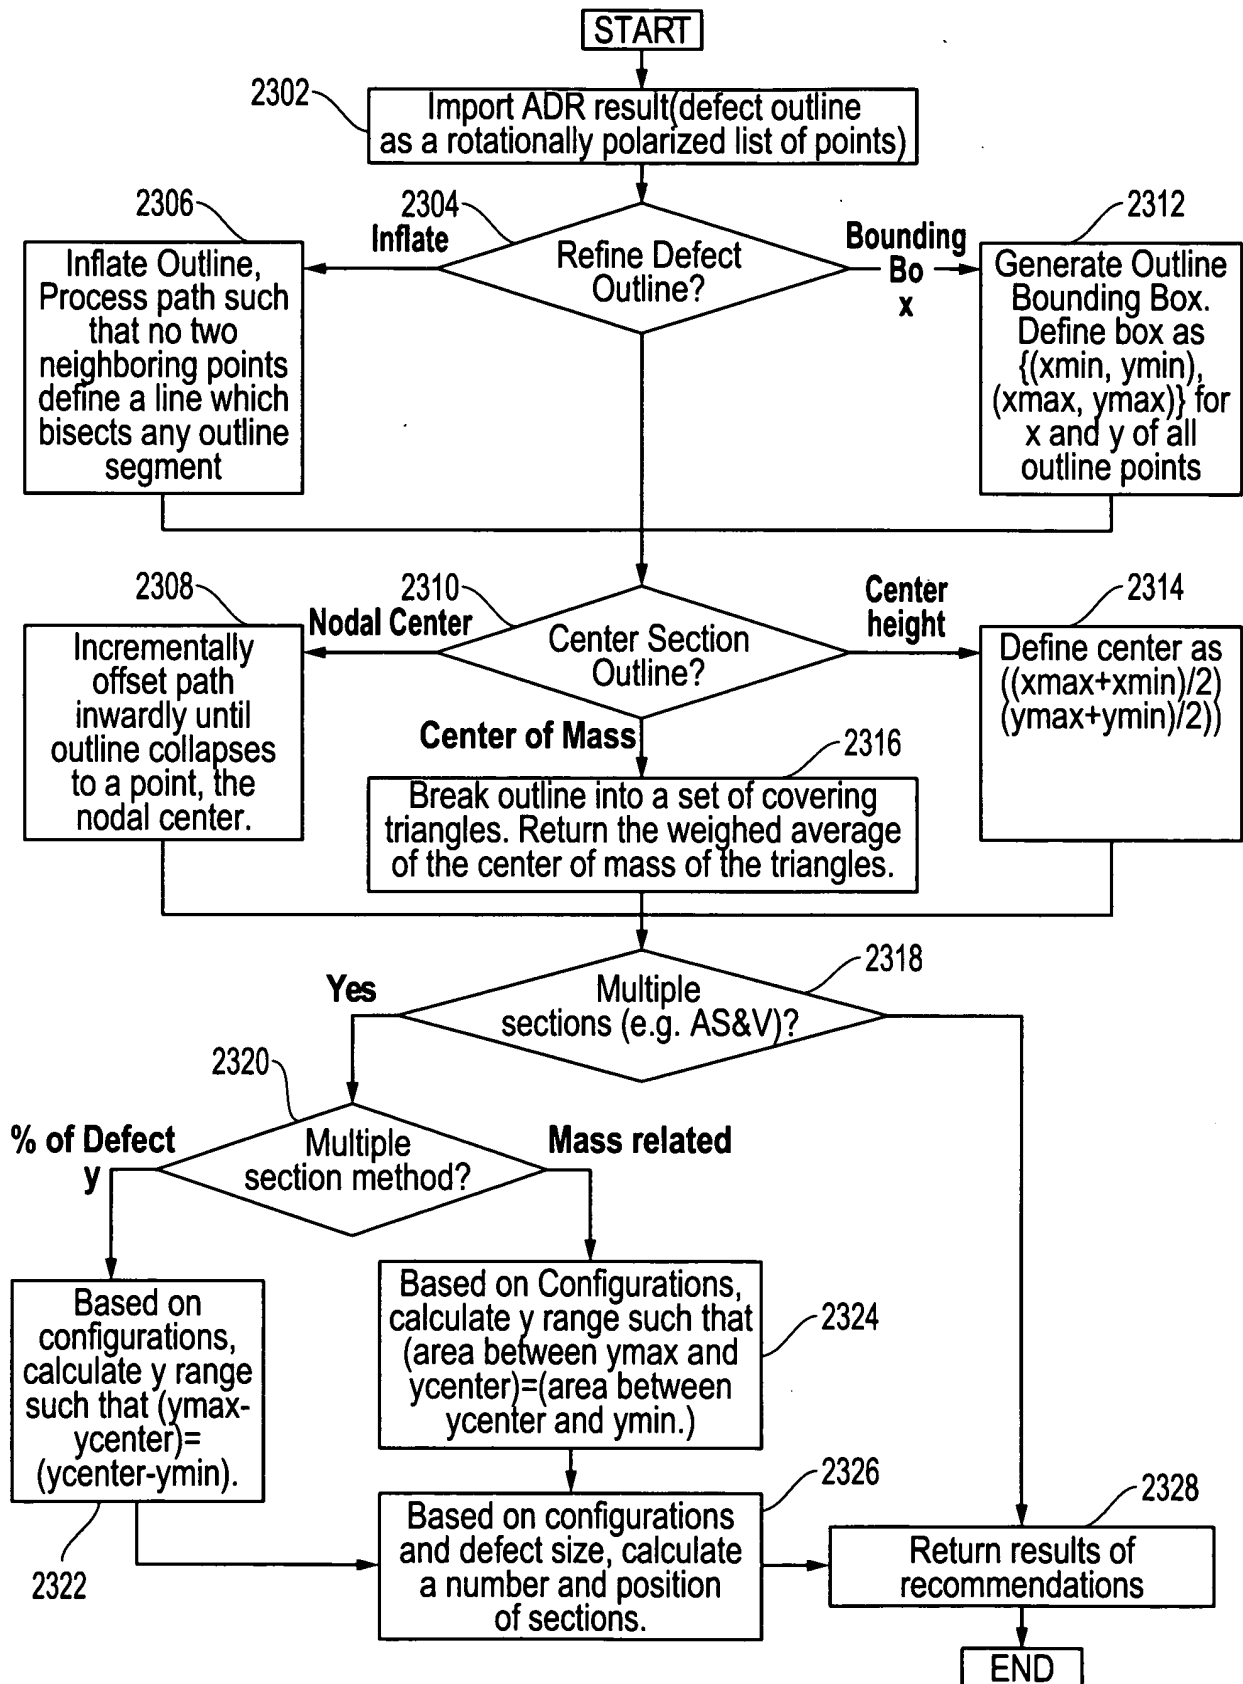


FIG. 23B

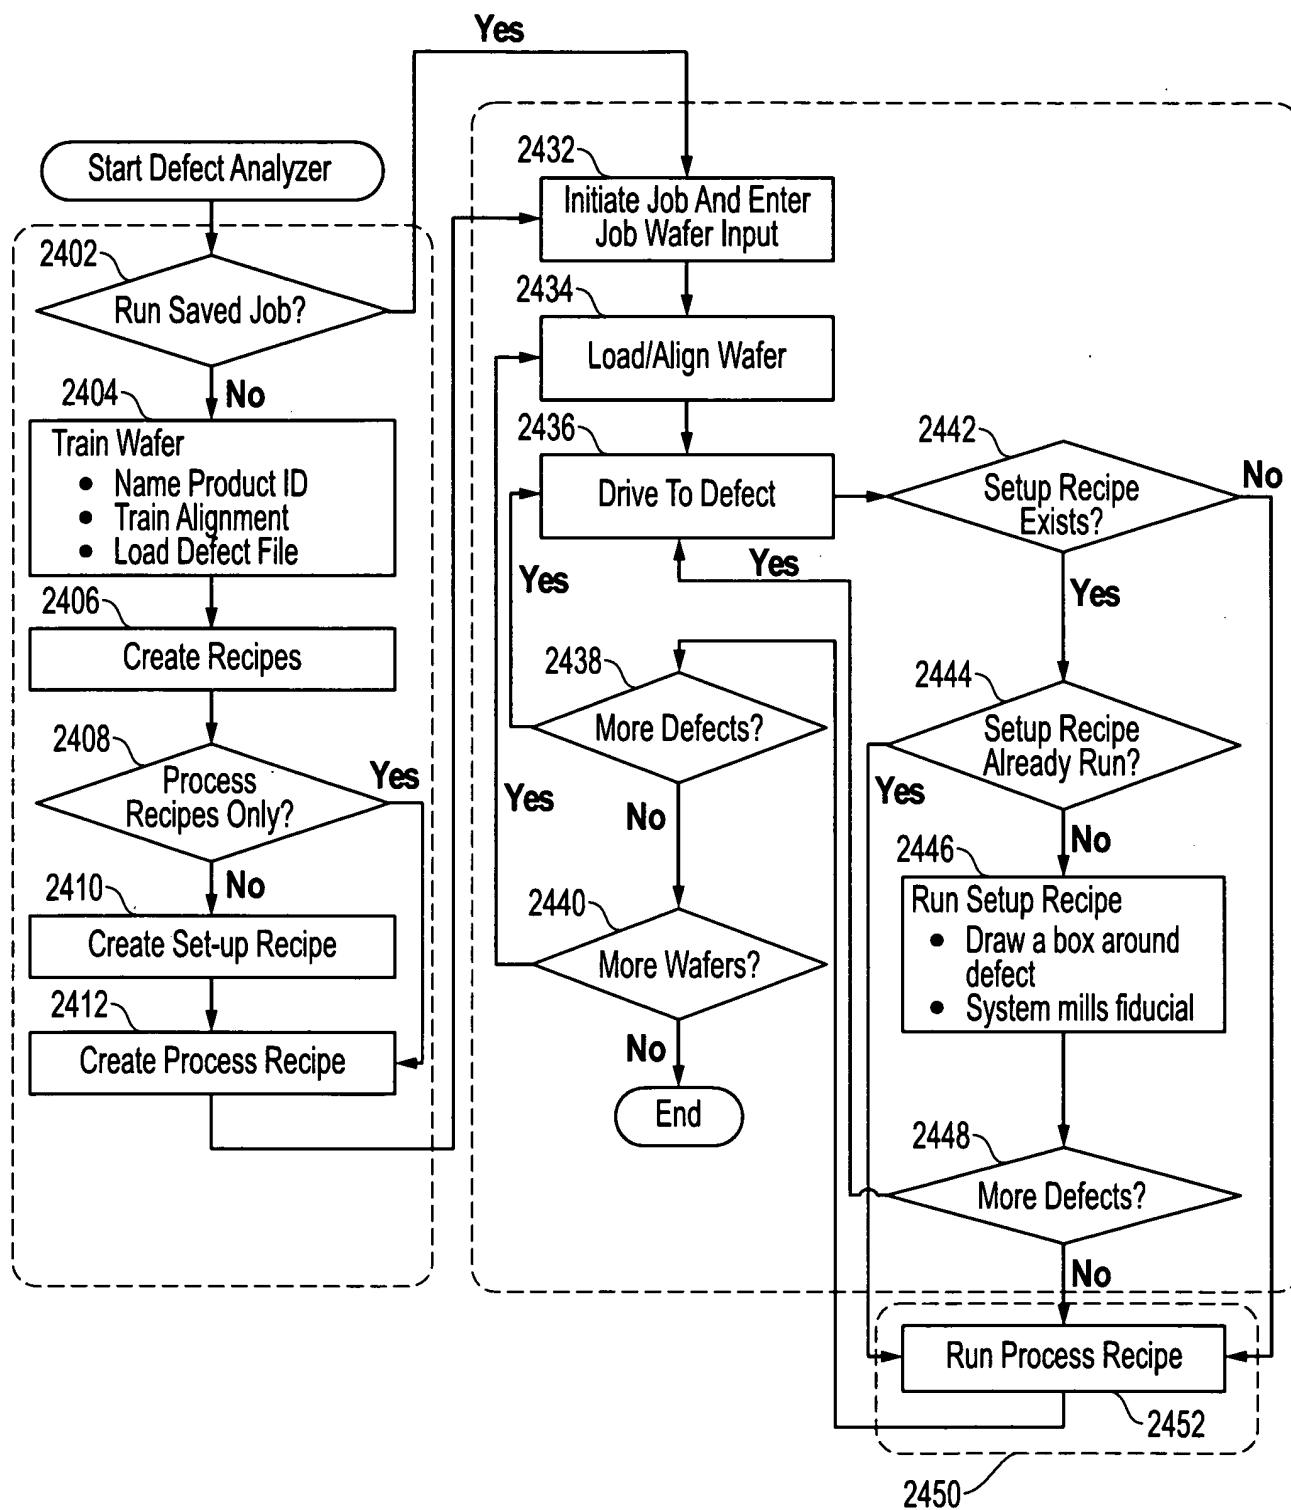


FIG. 24

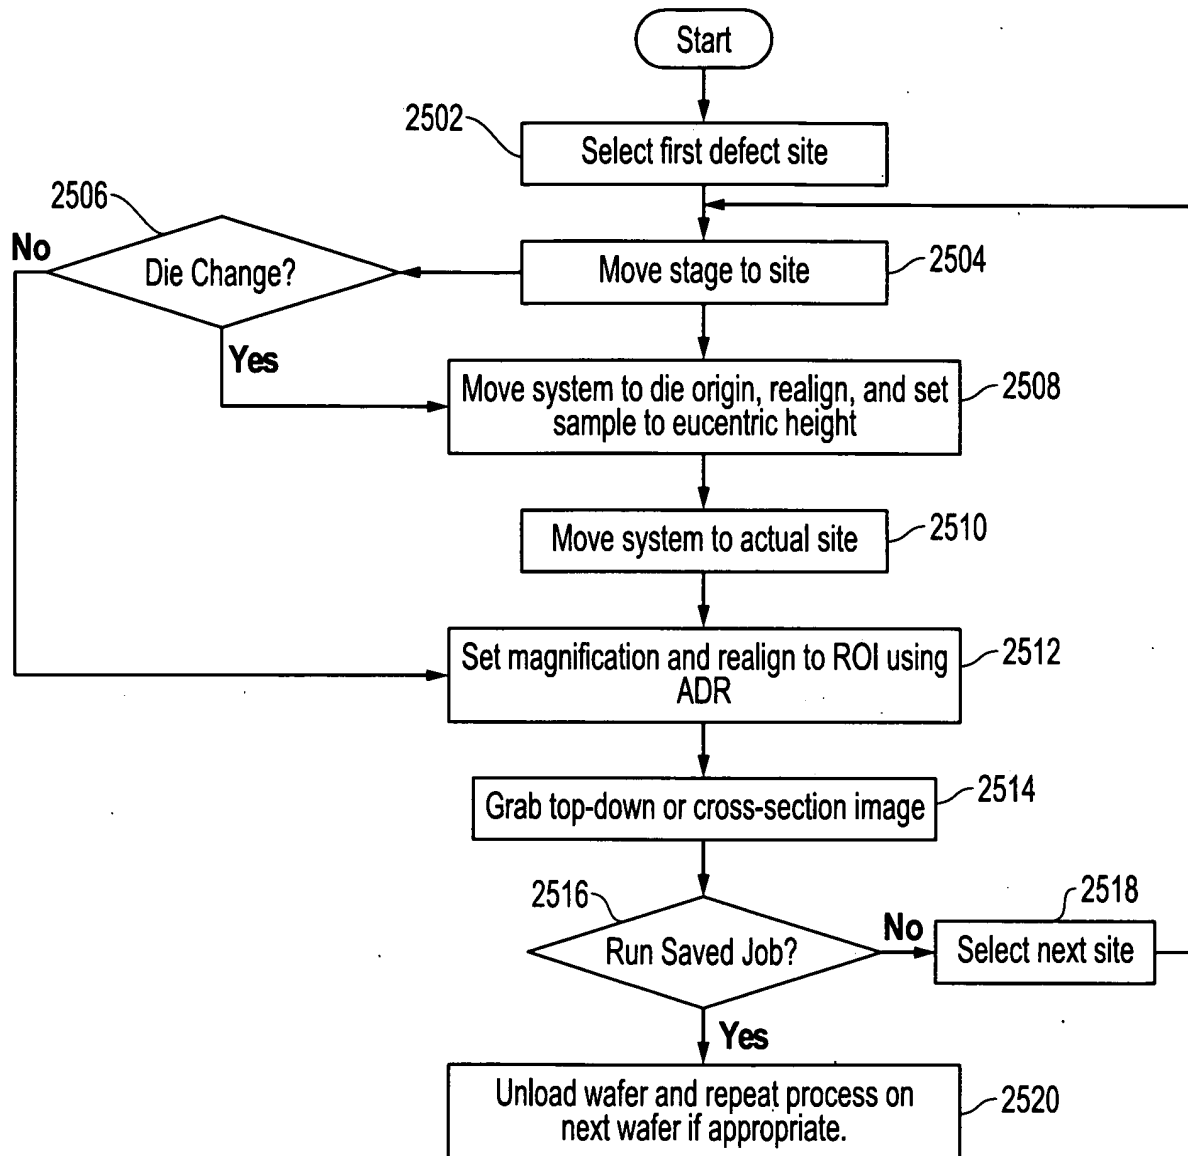


FIG. 25

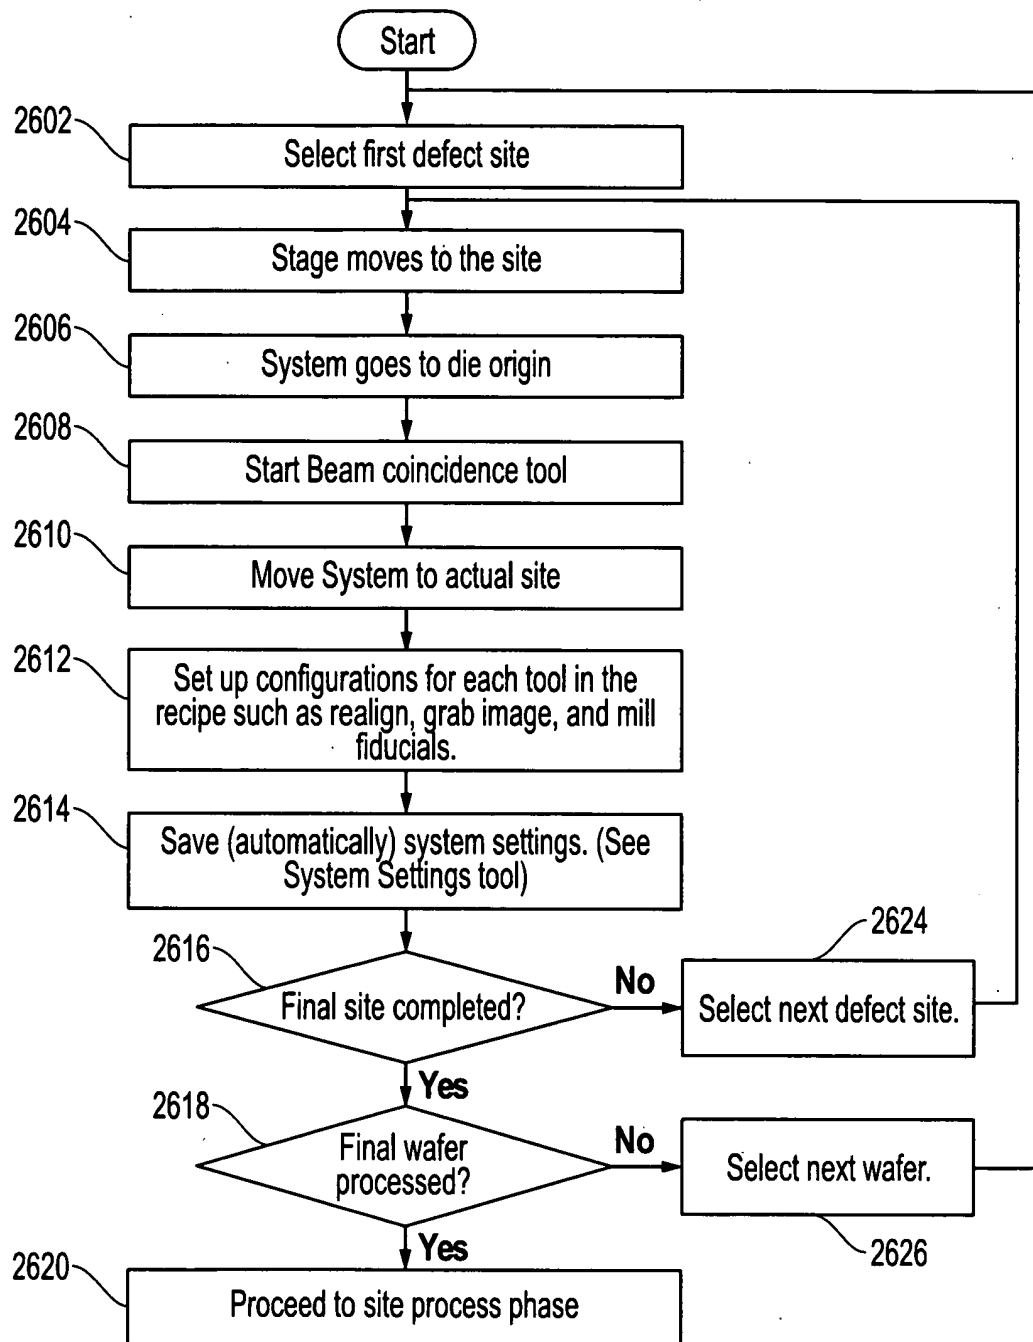


FIG. 26A

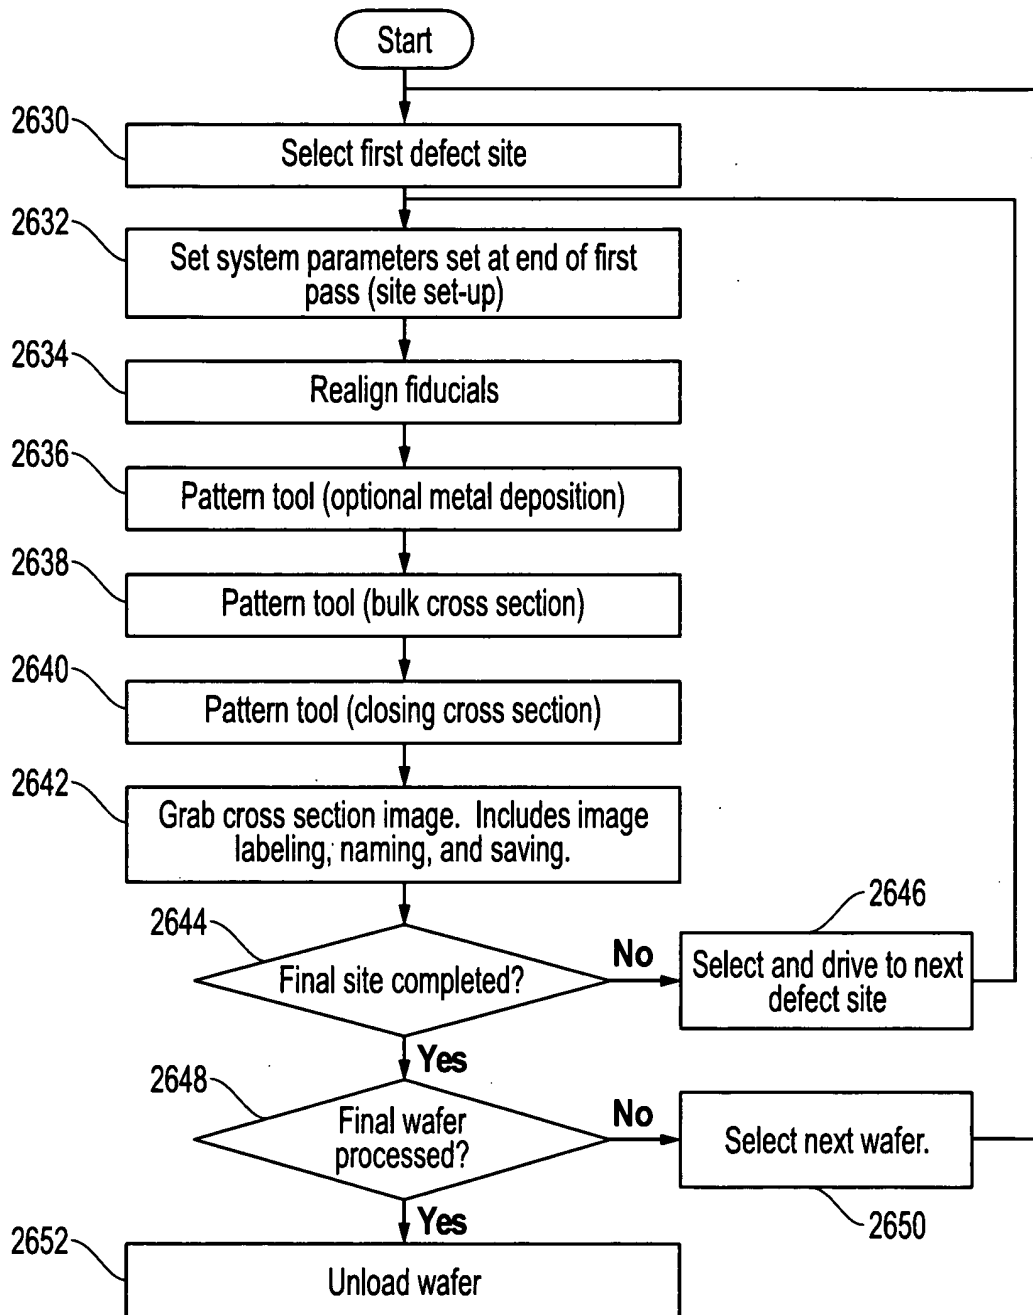


FIG. 26B

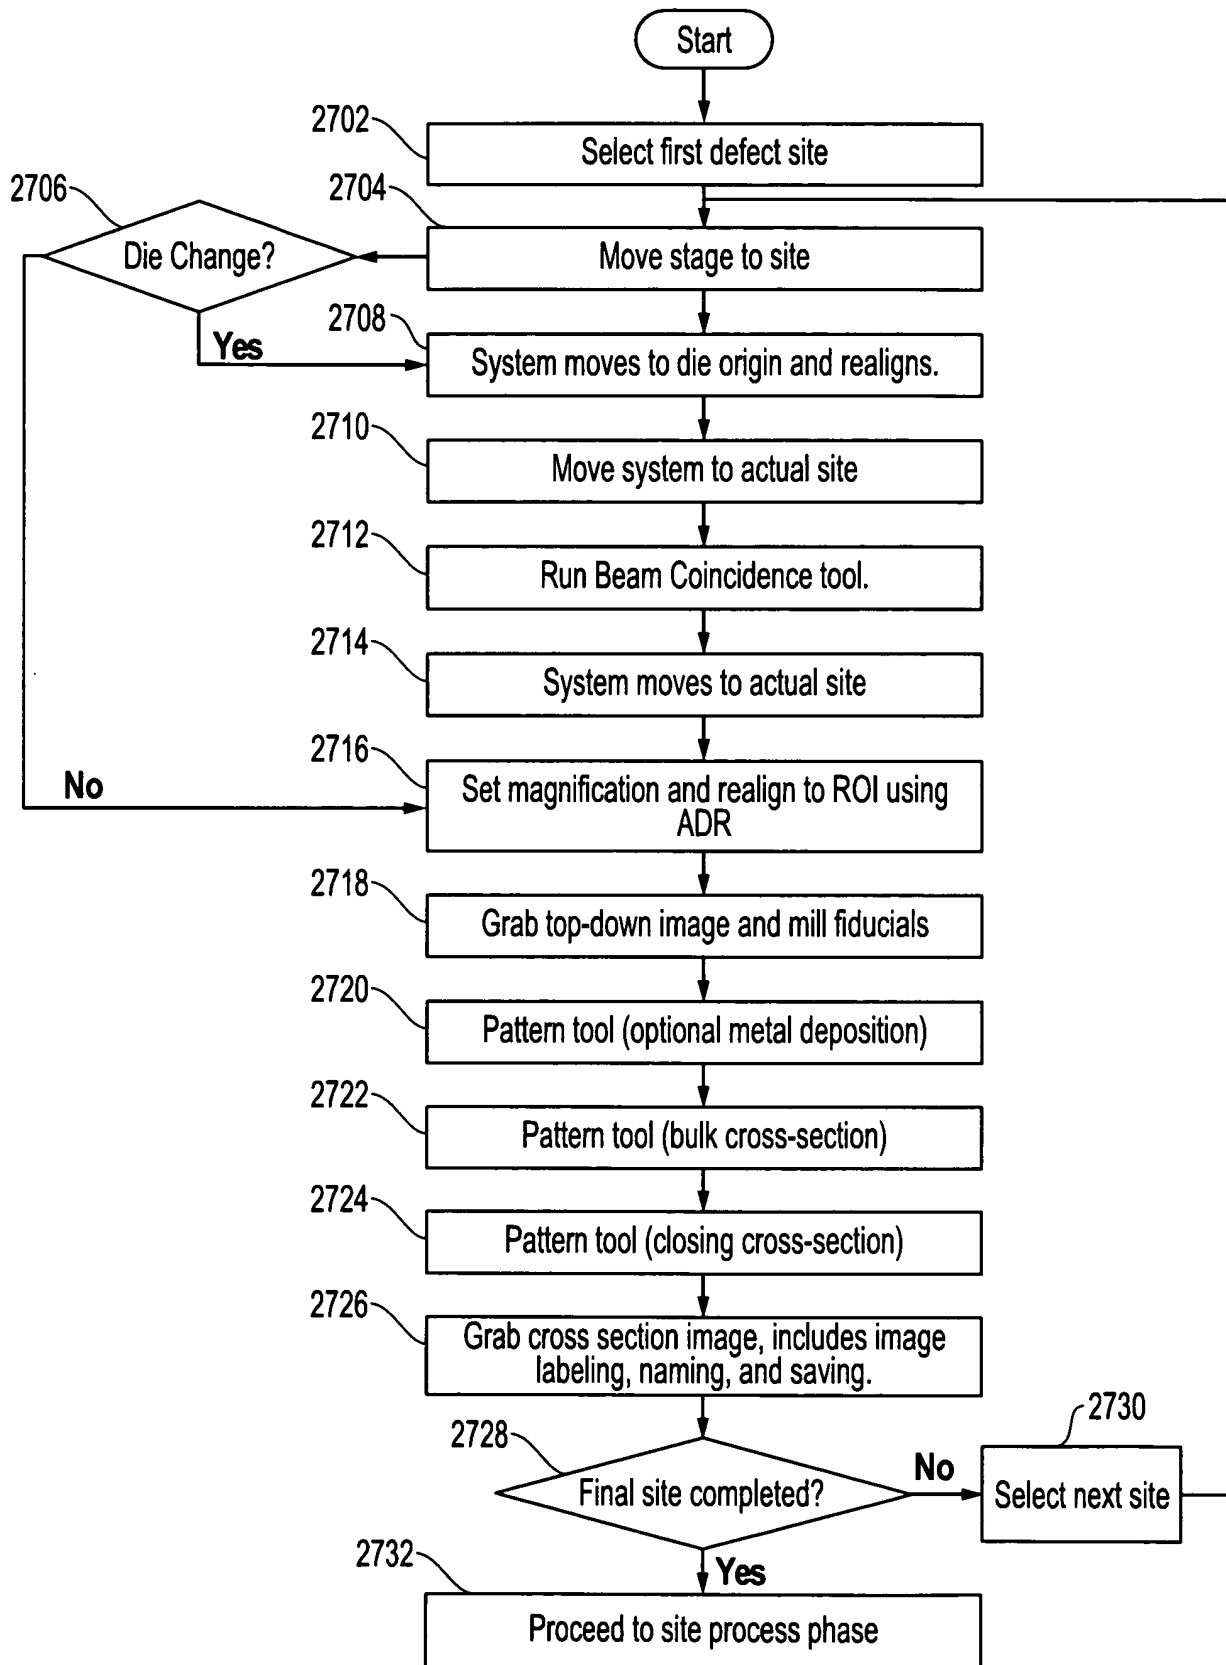


FIG. 27